




An Acument™ Global Technologies Company

Instruction Manual

Pass onto user to read and keep for reference

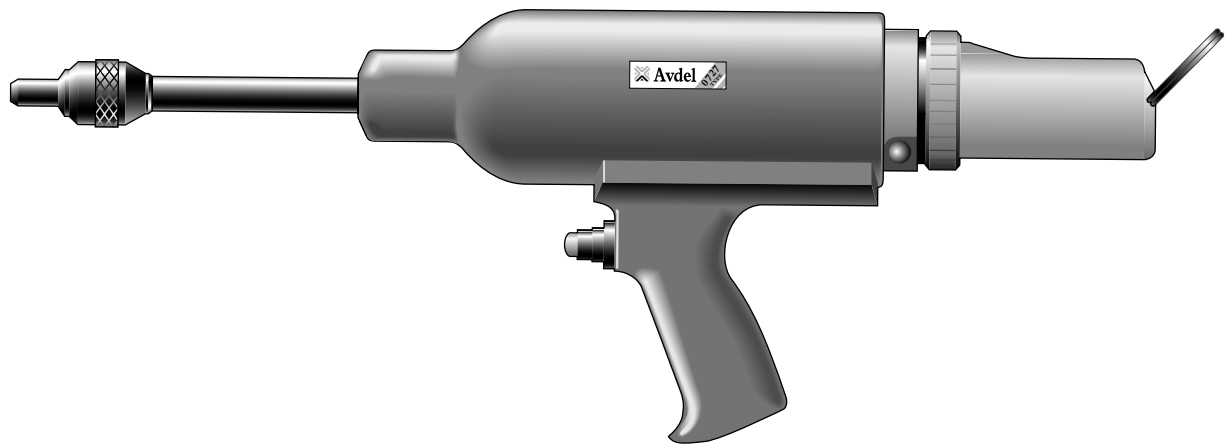

Pneumatic Power Tool

0727 type

07271 - 07274

AVDEL policy is one of continuous development. Specifications shown in this document may be subject to changes which may be introduced after publication. For the latest information always consult Avdel.

SPECIFICATIONS FOR 0727 TYPE TOOL

AIR PRESSURE	■	Minimum - Maximum	■ 5 - 8 bar	■ 70 - 120 lbf/in ²
FREE AIR VOLUME REQUIRED	■	07271	■ 1.72 litres	■ .0605 ft ³
@ 5.5 bar / 80 lbf/in ²		07274	■ 1.15 litres	■ .0403 ft ³
PULL FORCE	■	07271	■ 3.89 kN	■ 875 lbf
@ 4.8 bar / 70 lbf/in ²		07274	■ 2.45 kN	■ 550 lbf
CYCLE TIME	■	Approximately	■ 2.4 seconds	■
NOISE LEVEL	■	07271/4	■ < 70 dB(A)	■
WEIGHT	■	07271	■ 2.35 kg	■ 5.17 lb
(WITHOUT NOSE EQUIPMENT)		07274	■ 1.94 kg	■ 4.33 lb
VIBRATION	■	07271	■ < 2.5 m/s ²	■ 8 ft/s ²
		07274	■ 4.32 m/s ²	■ 14.17 ft/s ²

SAFETY

General	2
Specific to 0727 Tool	3

INTENT OF USE

Tool Capability	4
Tool Dimensions	5

PUTTING INTO SERVICE

Air Supply	6
Bush Stops	7
Cursor	7
Loading the Tool	8
Reloading the Tool	10
Operating Procedure	10
Accessories	10

NOSE EQUIPMENT

General	11
Nose Jaw Selection	11-14
Mandrel & Mandrel Follower Spring Selection	15-20

SERVICING

Regular Servicing - Service Kit	21
Maintenance	22-24
General Assembly & Parts List	25-26

FAULT DIAGNOSIS

Fault Diagnosis Table	27
-----------------------	----

S A F E T Y

This instruction manual must be read with particular attention to the following safety rules, by any person installing, operating, or servicing this tool.

❗ DO NOT USE OUTSIDE THE DESIGN INTENT.

❗ DO NOT USE EQUIPMENT WITH THIS TOOL/MACHINE OTHER THAN THAT RECOMMENDED AND SUPPLIED BY AVDEL.

❗ ANY MODIFICATION UNDERTAKEN BY THE CUSTOMER TO THE TOOL/MACHINE, NOSE ASSEMBLIES, ACCESSORIES OR ANY EQUIPMENT SUPPLIED BY AVDEL OR THEIR REPRESENTATIVES, SHALL BE THE CUSTOMER'S ENTIRE RESPONSIBILITY. AVDEL WILL BE PLEASED TO ADVISE UPON ANY PROPOSED MODIFICATION.

❗ THE TOOL/MACHINE MUST BE MAINTAINED IN A SAFE WORKING CONDITION AT ALL TIMES AND EXAMINED AT REGULAR INTERVALS FOR DAMAGE AND FUNCTION BY TRAINED COMPETENT PERSONNEL. ANY DISMANTLING PROCEDURE SHALL BE UNDERTAKEN ONLY BY PERSONNEL TRAINED IN AVDEL PROCEDURES. DO NOT DISMANTLE THIS TOOL/MACHINE WITHOUT PRIOR REFERENCE TO THE MAINTENANCE INSTRUCTIONS. CONTACT AVDEL WITH YOUR TRAINING REQUIREMENTS.

❗ THE TOOL/MACHINE SHALL AT ALL TIMES BE OPERATED IN ACCORDANCE WITH RELEVANT HEALTH AND SAFETY LEGISLATION. IN THE U.K. THE "HEALTH AND SAFETY AT WORK ETC. ACT 1974" APPLIES. ANY QUESTION REGARDING THE CORRECT OPERATION OF THE TOOL/MACHINE AND OPERATOR SAFETY SHOULD BE DIRECTED TO AVDEL.

❗ THE PRECAUTIONS TO BE OBSERVED WHEN USING THIS TOOL/MACHINE MUST BE EXPLAINED BY THE CUSTOMER TO ALL OPERATORS.

❗ ALWAYS DISCONNECT THE AIRLINE FROM THE TOOL/MACHINE INLET BEFORE ATTEMPTING TO ADJUST, FIT OR REMOVE A NOSE ASSEMBLY.

❗ DO NOT OPERATE A TOOL/MACHINE THAT IS DIRECTED TOWARDS ANY PERSON(S).

❗ ALWAYS ADOPT A FIRM FOOTING OR A STABLE POSITION BEFORE OPERATING THE TOOL/MACHINE.

❗ ENSURE THAT VENT HOLES DO NOT BECOME BLOCKED OR COVERED AND THAT HOSES ARE ALWAYS IN GOOD CONDITION.

❗ THE COMBINATION OF FASTENER, MANDREL, HOLE SIZE AND SHEET THICKNESS SHALL BE IN ACCORDANCE WITH AVDEL SPECIFICATIONS.

In addition to the general safety rules opposite, the following specific safety points must also be observed:

I M P O R T A N T

WHILE A SMALL AMOUNT OF WEAR AND MARKING WILL NATURALLY OCCUR THROUGH NORMAL AND CORRECT USE OF MANDRELS, THEY MUST BE REGULARLY EXAMINED FOR EXCESSIVE WEAR AND MARKING, WITH PARTICULAR ATTENTION TO THE HEAD DIAMETER, THE TAIL JAW GRIPPING AREA OF THE SHANK OR HEAVY PITTING OF THE SHANK AND ANY MANDREL DISTORTION. MANDRELS WHICH FAIL DURING USE COULD FORCIBLY EXIT THE TOOL. IT IS THE CUSTOMER'S RESPONSIBILITY TO ENSURE THAT MANDRELS ARE REPLACED BEFORE ANY EXCESSIVE LEVELS OF WEAR AND ALWAYS BEFORE THE MAXIMUM RECOMMENDED NUMBER OF PLACINGS. CONTACT YOUR AVDEL REPRESENTATIVE WHO WILL LET YOU KNOW WHAT THAT FIGURE IS BY MEASURING THE BROACH LOAD OF YOUR APPLICATION WITH OUR CALIBRATED MEASURING TOOL. THESE TOOLS CAN ALSO BE PURCHASED UNDER PART NUMBER 07900-09080, SUPPLIED WITH ALL NECESSARY INFORMATION FOR TESTING.

⚠ WHEN USING THE TOOL, THE WEARING OF SAFETY GLASSES IS REQUIRED BOTH BY THE OPERATOR AND OTHERS IN THE VICINITY TO PROTECT AGAINST FASTENER EJECTION, SHOULD A FASTENER BE PLACED 'IN AIR'. WE RECOMMEND WEARING GLOVES IF THERE ARE SHARP EDGES OR CORNERS ON THE APPLICATION.

⚠ THE OPERATING PRESSURE SHALL NOT EXCEED 8 BAR - 120 LBF/IN².

⚠ BENCH MOUNTED TOOLS MUST NOT BE USED WITHOUT AN AVDEL GUARD AND WITH THE SHIELD IN POSITION ABOVE THE TOOL BARREL AND THEY SHOULD NOT BE OPERATED IF THE GUARD IS DAMAGED IN ANY WAY.

⚠ DO NOT OPERATE THE TOOL WITHOUT FULL NOSE EQUIPMENT IN PLACE.

⚠ DO NOT CONTAMINATE THE TRANSPARENT SHIELD WITH SOLVENTS OR ALKALINE SUBSTANCES. THESE WILL REDUCE THE STRENGTH OF THE SHIELD.

⚠ TAKE CARE TO AVOID ENTANGLEMENT OF LOOSE CLOTHES, TIES, LONG HAIR, CLEANING RAGS ETC. IN THE MOVING PARTS OF THE TOOL WHICH SHOULD BE KEPT DRY AND CLEAN FOR BEST POSSIBLE GRIP.

⚠ THE CYLINDER OF THE TOOL MUST BE FREE TO MOVE WITHOUT RISK OF HITTING OR TRAPPING THE OPERATOR OR OTHER PERSONS.

⚠ WHEN CARRYING THE TOOL FROM PLACE TO PLACE KEEP HANDS AWAY FROM THE TRIGGER/LEVER TO AVOID INADVERTENT START UP.

INTENT OF USE

The pneumatic 0727 type tool is designed to place Avdel repetition fasteners (except 1/16" Avlug) making it ideal for batch or flow-line assembly in a wide variety of applications throughout all industries.

There are two models: the 07271 and 07274 are hand-held and can be suspended vertically through a ring at the rear of the tool.

Both models will place most repetition fasteners, as shown on the tables below.

Both models make use of the same nose equipment. Reference must be made to the Nose Equipment section of the manual when selecting compatible components for the type and size of fastener used in your application (see pages 11 to 20). Nose jaw dimensions are shown on page 12 and stated on pages 13 and 14.

FASTENER NAME	FASTENER SIZE									
	07271					07274				
	3/32"	1/8"	5/32"	3/16"	1/4"	3/32"	1/8"	5/32"	3/16"	1/4"
CHOBERT	●	●	●	●	●	●	●	●	●	●
GROVIT	●	●	●	●		●	●	●	●	
AVLUG	●	●				●	●			
BRIV	●	●	●	●		●	●	●		

FASTENER NAME	FASTENER SIZE											
	07271						07274					
	2.5mm 2.8mm	3mm	3.5mm	4mm	M2.5 4-40 UNC	M3 6-32 UNC	2.5mm 2.8mm	3mm	3.5mm	4mm	M2.5 4-40 UNC	M3 6-32 UNC
RIVSCREW		●	●	●				●	●	●		
AVTRONIC	●						●					
AVSERT					●	●					●	●

PUTTING INTO SERVICE


AIR SUPPLY

07271 AND 07274 MODELS

All tools are operated with compressed air at an optimum pressure of 5.5 bar. We recommend the use of pressure regulators and automatic oiling/filtering systems on the main air supply. To ensure maximum tool life and minimum tool maintenance, these should be fitted within 3 metres of the air inlet point on the tool itself for the 07271 and 07274 models, see diagram below.

Air supply hoses should have a minimum working effective pressure rating of 150% of the maximum pressure produced in the system or 10 bar, whichever is the highest. Air hoses should be oil resistant, have an abrasion resistant exterior and should be armoured where operating conditions may result in hoses being damaged. All air supply hoses **MUST** have a minimum bore diameter of 6.4 millimetres or $\frac{1}{4}$ inch.

Read servicing daily details on page 21.

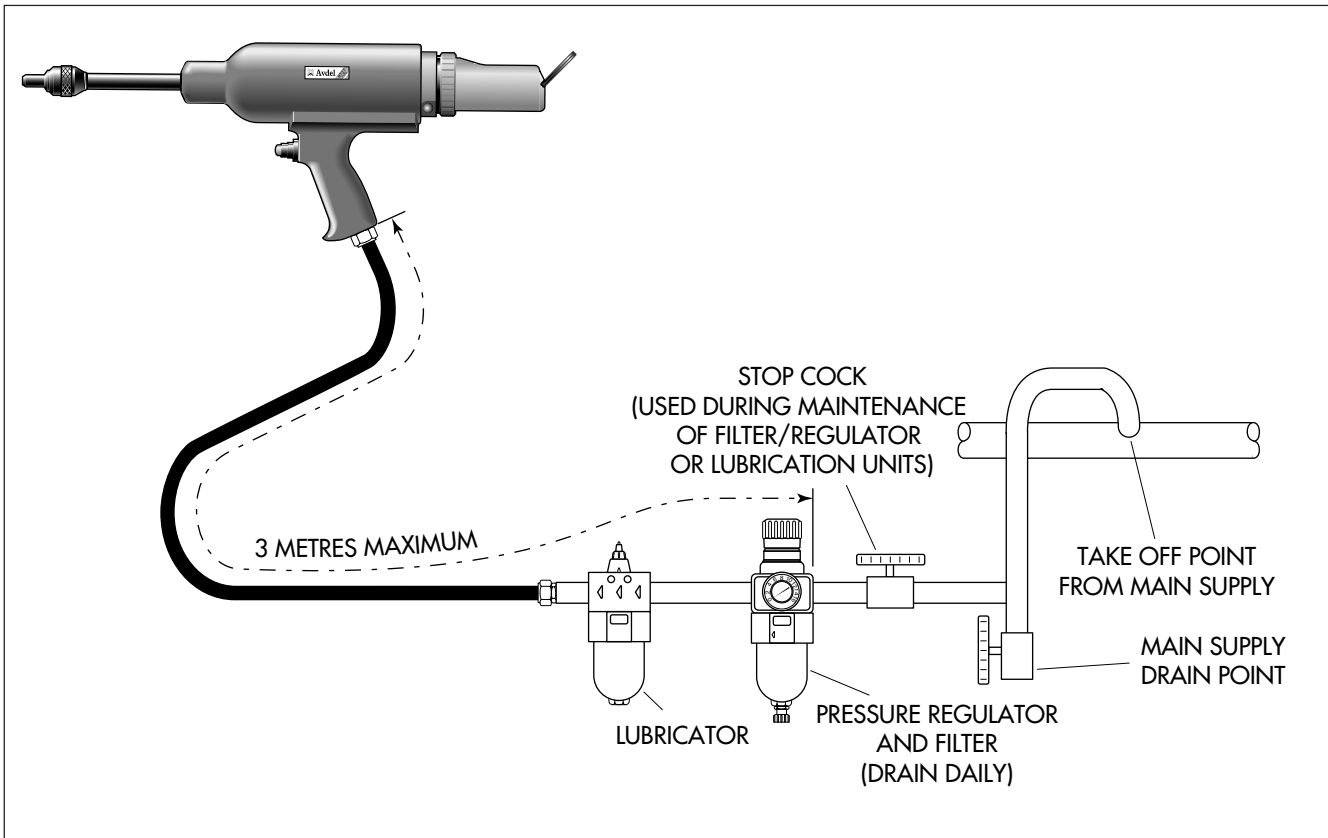

BUSH STOPS

IMPORTANT

Bush stops are fitted to reduce the stroke length of the tool thus the tool cycle time and shock loads. Minimising shock loads will increase the efficiency of the tool and will prolong the life of the mandrel.

Each tool is supplied with three bush stops already fitted. It may be necessary to remove one or more of these to match the length of the fasteners to be placed so that when in the fully back position, the mandrel head lies just inside the nose jaws.

Use the table below to ascertain the number of bush stops recommended for your fastener. First find the relevant diameter and within that section select the correct length code. These two digits are the last two of the fastener part number. Read the corresponding number of bush stops in the line below.

FASTENER DIAMETER	$\frac{3}{32}$ " , 2.5mm and 2.8mm										$\frac{1}{8}$ "					
FASTENER LENGTH CODE	04	06	08	10	12	14	16	18	20	22	04	06	08	10	12	14
NUMBER OF FULL BUSH STOPS	3	3	2	2	1	0	0	0	0	0	3	2	2	2	1	1

FASTENER DIAMETER	$\frac{5}{32}$ "						$\frac{3}{16}$ "						$\frac{1}{4}$ "			
FASTENER LENGTH CODE	05/06	07/08	09/10	11/12	13/14	15/16	07	09	11	13	15	17	09	11	13	15
NUMBER OF FULL BUSH STOPS	3	3	3	1	1	0	3	2	1	1	0	0	2	1	0	0

For extra bush stops, $\frac{1}{8}$ " thick, order part number 07170-00201. If a finer setting is required, $\frac{1}{16}$ " bush stops can be ordered, part number 07170-00204.

ADJUSTING THE NUMBER OF BUSH STOPS:

Item numbers in **bold** refer to the general assembly and parts list on pages 25 and 26.

- Ensure that the air supply to the tool is disconnected.
- Using the lock ring key supplied with the tool, unscrew lock ring **20** to remove the tail jaw assembly.
- Bush stops **12** are fitted onto barrel **59** forward of barrel nut **29**. Remove or add as required.
- Reassemble.
- Before checking that the mandrel head retracts to the correct position after a fastener has been placed, you will need to check the cursor orientation and load the tool with fasteners.

C U R S O R

IMPORTANT

If fitted incorrectly, the cursor will not allow feeding of the fasteners.


While the cursor will be fitted the correct way round when the tool is supplied, we recommend that you check its orientation before fitting the nose equipment. The sprung loaded, slightly concave, end of the cursor should point towards the front of the tool as shown in the illustration below.

When fitted the correct way round, the cursor will easily slide out of the barrel when a mandrel is pushed into its centre then pulled back.

To reverse the orientation of the cursor, follow these steps:

Item numbers in bold refer to the general assembly and parts list on pages 25 and 26.

- Remove tail jaw assembly 1.
- Pull out mandrel guide 17.
- Insert a mandrel pointed end first through the rear end of barrel 59 and push until the mandrel starts appearing at the front of barrel 59.
- Pull the mandrel from the front until the cursor falls out.
- Remove the mandrel and replace the cursor, correct way round.
- Replace mandrel guide 17 and tail jaw assembly 1.

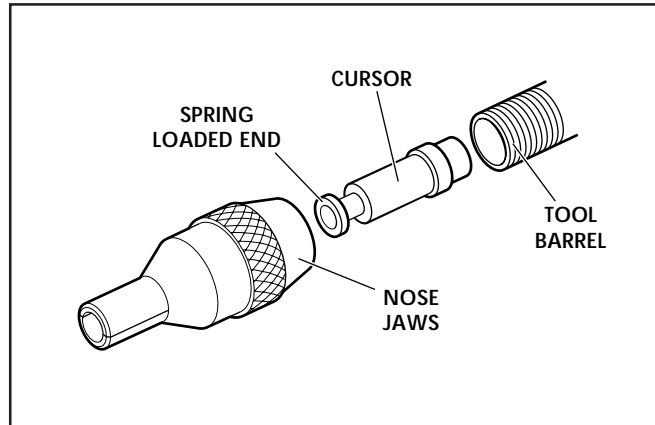

LOADING THE TOOL

IMPORTANT

The procedure for loading the tool and for fitting the nose equipment to the tool are integral.

When ordering a complete tool or system you will normally be supplied with all the nose equipment required for the fastener to be placed. To identify nose equipment components or to select the correct elements, read the nose equipment section, on pages 11 to 20.



If you have been supplied with a nose jaw, mandrels and mandrel follower springs proceed with loading the tool and fitting the nose equipment as follows:

Item numbers in bold refer to the general assembly and parts list on pages 22 and 23.

- Connect the air supply to the tool or system.
- Open tail jaws 9 which grip the mandrel, by switching off the tail jaw switch on the hand tools (items 53/54 on the 7271 and 07274).
- Screw selected nose jaws onto barrel 59 of the tool.
- Insert a mandrel into the tail end of the fasteners through the paper pod.
- Slide the mandrel follower spring onto the mandrel ENSURING correct orientation, as shown in the table page 9.
- Gripping the tail end of the mandrel, tear off the paper pod from around the fasteners.
- Open the nose jaws either by rotating the outer ring on Cam operated nose jaws or by pushing outwards on the jaw ends, as illustrated top left on page 10.
- Insert the previously assembled mandrel, mandrel follower spring and fasteners into the nose jaws until the first fastener to be placed is protruding from the nose jaw.
- Close the nose jaws and adjust so that the first fastener protrudes by 1.5mm to 3mm ($1/16''$ to $1/8''$), as shown in the illustration top right on page 10.
- Close the tail jaws to ensure the mandrel is gripped.

MANDREL FOLLOWER SPRINGS IDENTIFICATION AND ORIENTATION

FASTENER		NOSE JAW (SEE NOSE EQUIPMENT SECTION)	MANDREL SIZE	MANDREL/MANDREL FOLLOWER SPRING AND FASTENER ASSEMBLY
NAME	SIZE			
BRIV	3/32"	STANDARD TAPERED	ALL	
	3/32"	LIMITED ACCESS & LIMITED ACCESS CAM OPERATED	ALL	
	1/8"	ALL	ALL	
	5/32"	ALL	ALL	
	3/16"	ALL	ALL	
CHOBERT AVLUG GROVIT	3/32"	ALL EXCEPT STANDARD TAPERED, LIMITED ACCESS	ALL	
	3/32"	STANDARD TAPERED, LIMITED ACCESS	ALL	
	1/8"	ALL	ALL	
CHOBERT GROVIT	5/32"	ALL	ALL EXCEPT 3rd OVERSIZE	
	5/32"	ALL	3rd OVERSIZE	
	3/16"	ALL	ALL EXCEPT 2nd OVERSIZE	
	3/16"	ALL	2nd OVERSIZE	
CHOBERT	1/4"	ALL	ALL	
RIVSCREW	3mm 3.5mm 4mm	ALL	ALL	
AVSERT	2.5mm 4 x 40 UNC	ALL	ALL	
	3mm 6 x 32 UNC	ALL	ALL	
AVTRONIC	2.5mm	ALL	ALL	
	2.8mm	ALL EXCEPT LIMITED ACCESS	ALL	
	2.8mm	LIMITED ACCESS	ALL	

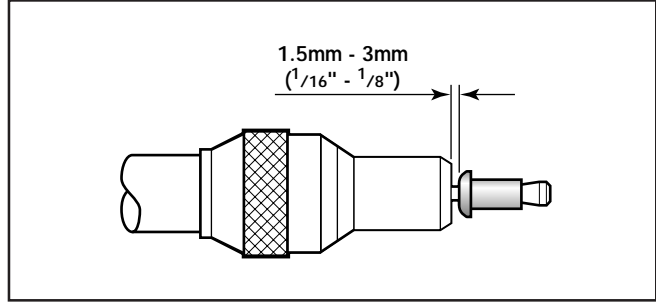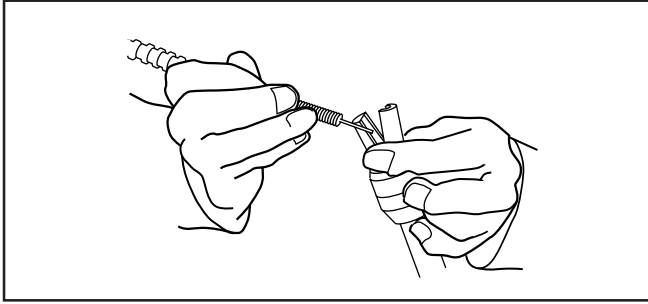

RELOADING THE TOOL

- Open tail jaws of tool.
- Open the nose jaws and pull the empty mandrel and mandrel follower spring out of the tool.
- Reload the tool by following the above instructions, starting at stage ■.

OPERATING PROCEDURE

IMPORTANT

It is essential to check that the number of bush stops, the cursor orientation and the nose equipment are correct before attempting to operate the tool.


07271 AND 07274 MODELS

- Connect the air supply.
- Push the fastener which protrudes from the nose jaws, fully into the application hole ensuring that the tool is held square.
- Operate the trigger WITHOUT releasing; the fastener is pushed over the mandrel head and formed into the application.
- Remove the tool.
- Release the trigger. The next fastener will automatically be presented through the nose jaws, ready for placing.

ACCESSORIES

This accessory is designed to be fitted to the 07271 and 07274 tools only when placing Avserts. It enables the application to be held square to the Avsert during the placing sequence. Fit as follows:

- Remove the nose jaws, if fitted.
- Slide the inner collar over the barrel until the barrel sits on the shoulder inside the collar.
- Screw the nose jaws onto the barrel to retain the inner collar.
- Slide the outer body of the attachment over the inner collar and rotate to ensure that the pin on the inner collar locates in the bayonet slot on the outer body.

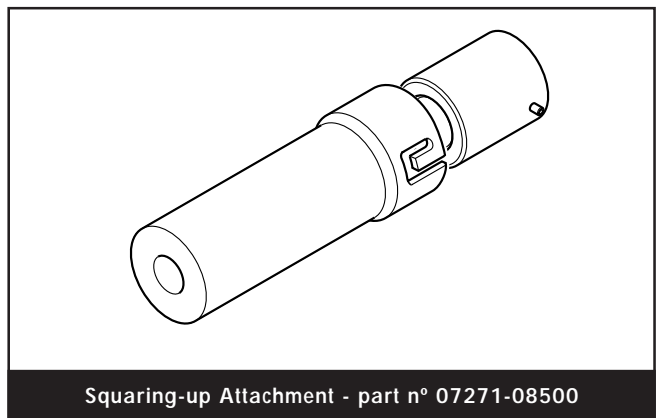

Squaring-up Attachment - part n° 07271-08500

NOSE EQUIPMENT

On speed riveting tools such as the 0727 type, the nose equipment always consists of three elements; a nose jaw, a mandrel and a follower spring. All three items are matched to the fastener being placed and to the hole size in the application.

IMPORTANT

To avoid complete dismantling of the tool it is essential to check the orientation of the cursor before fitting the nose equipment to the tool. See 'CURSOR' section on page 7.

It is essential that the correct nose equipment is fitted to the tool to ensure both effective placing of the fastener and SAFE operation of the tool. READ THE SAFETY INSTRUCTIONS pages 2 and 3 carefully.

To identify the correct combination of nose equipment to fit your tool first select a nose jaw by reading the section below then read the mandrel section to select part numbers both for the mandrel itself and for the mandrel follower spring. Mandrels and mandrel follower springs are illustrated on page 9.

To fit the nose equipment, follow the 'Loading the tool' procedure on page 8.

NOSE JAWS

IMPORTANT

The wrong nose jaw could result in an incorrectly placed fastener or unsatisfactory clench.

Nose Jaws can be categorised into seven different basic shapes as drawn opposite, even though internal dimensions will vary according to the fastener it is intended for. Exact dimensions referring to the letters in the illustrations opposite are indicated in the 'NOSE JAW SELECTION TABLES' over the next two pages.

For a particular shape, there may be several options of end form giving access benefits or fastener placing enhancement.

FLAT

- Normal end form of all nose jaws.
- Suitable on all applications with no access restrictions.

UNIVERSAL

- Designed for use with universal head Chobert fasteners.
- Can also be used with Briv fasteners to obtain the highest possible clench. Note this reduces the maximum grip range of the Briv fastener by approximately 0.015" (0.4mm).

RECESSED

- For use with Briv fasteners ONLY.
- It gives a higher clench than a flat end form but less than a universal end form, with no reduction of the grip range of the fastener.

TAPERED


- Available as shown in the 'Nose Jaw Selection Tables'.
- Allows greater accessibility than a flat end form and places the same range.

HEAD FORMING


- For use with Rivscrew fasteners ONLY.
- Deforms the heads of the fasteners to achieve good clench.

SELECTING A NOSE JAW


- List the name, size and material of the fastener to be placed.
- Look for this fastener in the first column of the nose jaw selection tables on page 13 if using imperial measurements and on page 14 if using metric units.
- Looking right across the table, take note of which nose jaws are available. ONLY those shown are available.
- Select which is most suitable for your application by referring to the respective nose jaw drawing. If your application has no access restriction, you should select the standard shape with a flat end form with or without a cam.

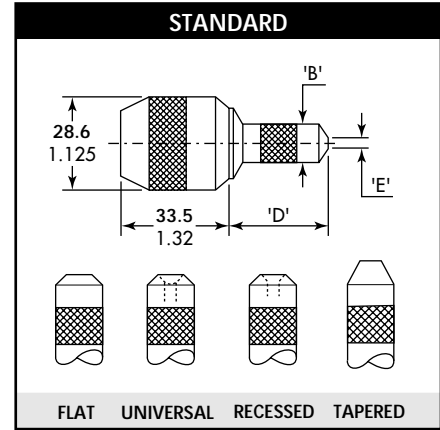


Available in four different end forms to place all fasteners (except Rivscrew). Suitable on applications with no or little access restriction.

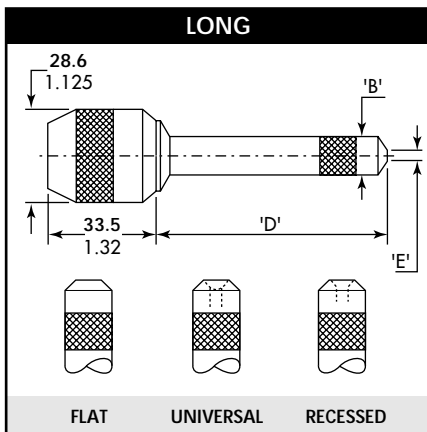


Available to place most of the fasteners. Allows more penetration into applications with no other access restriction.

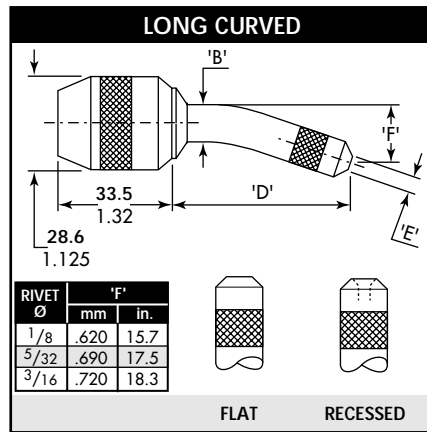



Available as shown in NOSE JAW SELECTION TABLE. Allows more penetration into applications with restricted access. Mandrels must be curved by hand to follow the shape of the jaw.

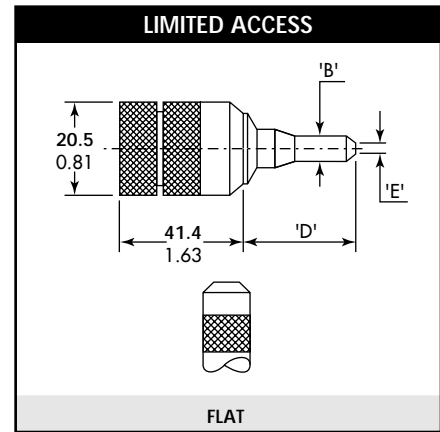

Available as shown in NOSE JAW SELECTION TABLE. Allows access into very restrictive applications.

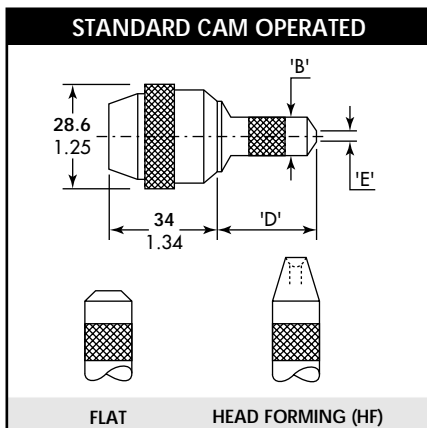

Available as shown in NOSE JAW SELECTION TABLE overleaf. Equivalent functions to the Standard, Long and Limited Access above with the addition of a cam to ease and speed up the nose jaw opening thus the pod reloading procedure.

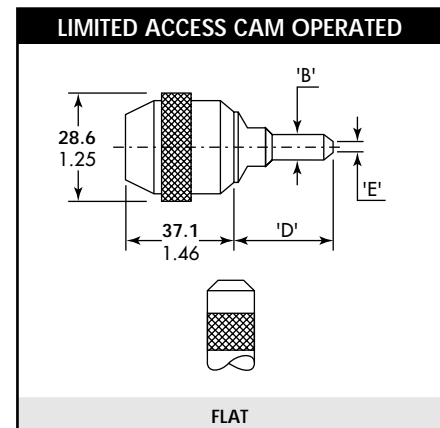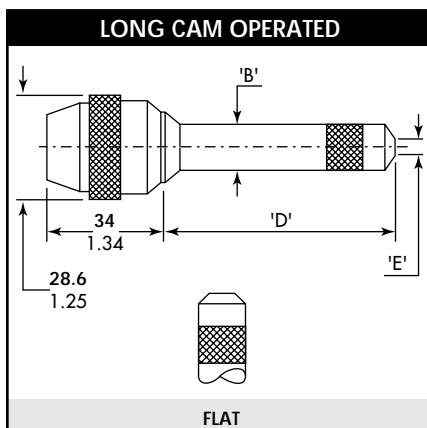

NOSE JAW SELECTION

IMPERIAL

The 'REF N°' column cross references with the 'REF N°' columns in the mandrel section. It identifies both the mandrel and mandrel follower spring required for a particular nose jaw with a specific fastener.

FASTENER	REF. N°	NOSE JAW					REF. N°	NOSE JAW				
		TYPE AND END FORM	PART N°	DIMENSIONS				TYPE AND END FORM	PART N°	DIMENSIONS		
				'B'	'D'	'E'				'B'	'D'	'E'
3/32" CHOBERT & GROVIT	1	STANDARD - FLAT	07150-03003	.36	1.30	.16	1	# STANDARD - UNIVERSAL	07150-03203	.36	1.33	.24
	1	STD. CAM OPERATED - FLAT	07170-04500	.36	1.30	.16	1	LTD. ACCESS CAM OPERATED	07177-03003	.20	1.18	.16
	2	STANDARD - TAPERED	07170-03103	.36	1.30	.16	3	LIMITED ACCESS	07274-01000	.22	1.07	.16
	4	LONG - FLAT	07150-04003	.41	2.30	.16	4	LONG CURVED - FLAT	07150-05003	.41	2.28	.16
1/8" CHOBERT & GROVIT	5	STANDARD - FLAT	07150-03004	.41	1.18	.20	5	# STANDARD - UNIVERSAL	07150-03204	.41	1.22	.32
	5	STANDARD - TAPERED	07170-03104	.41	1.19	.20	5	STD. CAM OPERATED - FLAT	07170-04600	.41	1.18	.20
	6	LONG - FLAT	07150-04004	.41	2.18	.20	6	# LONG - UNIVERSAL	07150-04204	.41	2.22	.30
	6	LONG CURVED - FLAT	07150-05004	.41	2.12	.20	6	LONG CAM OPERATED - FLAT	07170-05000	.41	2.18	.20
5/32" CHOBERT & GROVIT	7	STANDARD - FLAT	07150-03005	.48	1.30	.24	7	# STANDARD - UNIVERSAL	07150-03205	.48	1.35	.41
	7	STANDARD - TAPERED	07150-03105	.44	1.30	.24	7	STD. CAM OPERATED - FLAT	07170-04700	.48	1.30	.24
	8	LONG - FLAT	07150-04005	.48	2.30	.24	8	# LONG - UNIVERSAL	07150-04205	.48	2.35	.42
	8	LONG CURVED - FLAT	07150-05005	.48	2.23	.24	8	LONG CAM OPERATED - FLAT	07170-05100	.48	2.30	.24
3/16" CHOBERT & GROVIT	9	STANDARD - FLAT	07150-03006	.56	1.18	.33	9	# STANDARD - UNIVERSAL	07150-03206	.56	1.24	.47
	9	STANDARD - TAPERED	07150-03106	.56	1.18	.33	9	STD. CAM OPERATED - FLAT	07170-04800	.56	1.18	.33
	10	LONG - FLAT	07150-04006	.56	2.30	.33	10	# LONG - UNIVERSAL	07150-04206	.56	2.39	.48
	10	LONG CURVED - FLAT	07150-05006	.56	2.21	.33	10	LONG CAM OPERATED - FLAT	07170-05200	.56	2.30	.33
1/4" CHOBERT	11	STANDARD - FLAT	07150-03008	.64	1.18	.39	11	STD. CAM OPERATED - FLAT	07170-04900	.64	1.18	.39
	12	LONG - FLAT	07150-04008	.64	2.18	.39	12	LONG CAM OPERATED - FLAT	07170-05300	.64	2.18	.39
3/32" BRIV Brass only	13	STANDARD - TAPERED	07170-03103	.36	1.30	.15	14	LTD. ACCESS CAM OPERATED	07177-03003	.20	1.18	.16
	14	LIMITED ACCESS	07274-01000	.22	1.07	.16	-	-	-	-	-	-
1/8" BRIV Al. Alloy, Brass, Steel	15	STANDARD - FLAT	07150-03004	.41	1.18	.20	15	STANDARD - RECESSED	07170-03004	.41	1.20	.30
	15	STANDARD - TAPERED	07170-03104	.41	1.19	.20	16	LONG - FLAT	07150-04004	.41	2.18	.20
	16	LONG - RECESSED	07170-03204	.41	2.18	.30	16	LONG CURVED - FLAT	07150-05004	.41	2.12	.20
	16	LONG CURVED - RECESSED	07170-03304	.41	2.12	.30	-	-	-	-	-	-
5/32" BRIV Al. Alloy, Brass, Steel	17	STANDARD - FLAT	07150-03005	.48	1.30	.24	17	STANDARD - RECESSED	07170-03005	.48	1.32	.41
	18	LONG - FLAT	07150-04005	.48	2.30	.24	18	LONG - RECESSED	07170-03205	.48	2.30	.41
	18	LONG CURVED - FLAT	07150-05005	.48	2.23	.24	18	LONG CURVED - RECESSED	07170-03305	.48	2.23	.41
5/32" BRIV St. Steel only	19	STANDARD - FLAT	07150-03005	.48	1.30	.24	19	STANDARD - RECESSED	07170-03005	.48	1.32	.41
	20	LONG - FLAT	07150-04005	.48	2.30	.24	20	LONG - RECESSED	07170-03205	.48	2.30	.41
	20	LONG CURVED - FLAT	07150-05005	.48	2.23	.24	20	LONG CURVED - RECESSED	07170-03305	.48	2.23	.41
3/16" BRIV Al. Alloy, Brass, Steel	21	STANDARD - FLAT	07150-03006	.56	1.18	.33	21	STANDARD - RECESSED	07170-03006	.56	1.20	.47
	22	LONG - FLAT	07150-04006	.56	2.30	.33	22	LONG - RECESSED	07170-03206	.56	2.30	.47
	22	LONG CURVED - FLAT	07150-05006	.56	2.21	.33	22	LONG CURVED - RECESSED	07170-03306	.56	2.21	.47
3/16" BRIV St. Steel only	23	STANDARD - FLAT	07150-03006	.56	1.18	.33	23	STANDARD - RECESSED	07170-03006	.56	1.20	.47
	24	LONG - FLAT	07150-04006	.56	2.30	.33	24	LONG - RECESSED	07170-03206	.56	2.30	.47
	24	LONG CURVED - FLAT	07150-05006	.56	2.21	.33	24	LONG CURVED - RECESSED	07170-03306	.56	2.21	.47
3/32" AVLUG	25	STANDARD - FLAT	07150-03003	.36	1.30	.16	25	STANDARD - TAPERED	07150-03103	.36	1.30	.16
	25	STD. CAM OPERATED - FLAT	07170-04500	.36	1.30	.16	26	LONG - FLAT	07150-04003	.41	2.30	.16
	26	LONG CURVED - FLAT	07150-05003	.41	2.28	.16	-	-	-	-	-	-
1/8" AVLUG	27	STANDARD - FLAT	07150-03004	.41	1.18	.20	27	STANDARD - TAPERED	07170-03104	.41	1.19	.20
	27	STD. CAM OPERATED - FLAT	07170-04600	.41	1.18	.20	28	LONG - FLAT	07150-04004	.41	2.18	.20
	28	LONG CURVED - FLAT	07150-05004	.41	2.12	.20	28	LONG CAM OPERATED - FLAT	07170-05000	.41	2.18	.20
2.5mm, 4-40 UNC AVSERT	29	STANDARD - FLAT	07150-03003	.36	1.30	.16	-	-	-	-	-	-
3.0mm, 6-32 UNC AVSERT	30	STANDARD - FLAT	07150-03004	.41	1.18	.20	30	STD. CAM OPERATED - FLAT	07170-04600	.41	1.18	.20
2.5mm AVTRONIC	31	STANDARD - FLAT	07150-03003	.36	1.30	.16	31	LTD. ACCESS CAM OPERATED	07271-08000	.41	1.18	.16
	32	LONG - FLAT	07150-04003	.41	2.30	.16	-	-	-	-	-	-
2.8mm AVTRONIC	33	STANDARD - FLAT	07271-05600	.36	1.30	.16	34	LTD. ACCESS CAM OPERATED	07271-08100	.40	1.18	.16
	35	LONG - FLAT	07271-05900	.41	2.30	.16	-	-	-	-	-	-
3.0mm RIVSCREW	36	STD. CAM OPERATED - HF	07271-03000	.41	1.18	.24	-	-	-	-	-	-
3.5mm RIVSCREW	37	STD. CAM OPERATED - HF	07271-03500	.41	1.18	.24	-	-	-	-	-	-
4.0mm RIVSCREW	38	STD. CAM OPERATED - HF	07271-04000	.41	1.18	.25	-	-	-	-	-	-

These nose jaws are suitable for placing Chobert rivets with a Universal Head Form. When used on the equivalent size of Briv, the highest possible clench is achieved. Note that when using Briv fasteners, the maximum grip is reduced by approximately 0.015" (0.4 mm).

NOSE JAW SELECTION

METRIC

FASTENER	REF. N°	NOSE JAW					REF. N°	NOSE JAW				
		TYPE AND END FORM	PART N°	DIMENSIONS				TYPE AND END FORM	PART N°	DIMENSIONS		
				'B'	'D'	'E'				'B'	'D'	'E'
3/32" CHOBERT & GROVIT	1	STANDARD - FLAT	07150-03003	9.14	33.02	4.06	1	# STANDARD - UNIVERSAL	07150-03203	9.14	33.78	6.10
	1	STD. CAM OPERATED - FLAT	07170-04500	9.14	33.02	4.06	1	LTD. ACCESS CAM OPERATED	07177-03003	5.08	29.97	4.06
	2	STANDARD - TAPERED	07170-03103	9.14	33.02	4.06	3	LIMITED ACCESS	07274-01000	5.59	27.18	4.06
	4	LONG - FLAT	07150-04003	10.41	58.42	4.06	4	LONG CURVED - FLAT	07150-05003	10.41	57.91	4.06
1/8" CHOBERT & GROVIT	5	STANDARD - FLAT	07150-03004	10.41	29.97	5.08	5	# STANDARD - UNIVERSAL	07150-03204	10.41	30.99	8.13
	5	STANDARD - TAPERED	07170-03104	10.41	30.23	5.08	5	STD. CAM OPERATED - FLAT	07170-04600	10.41	29.97	5.08
	6	LONG - FLAT	07150-04004	10.41	55.37	5.08	6	# LONG - UNIVERSAL	07150-04204	10.41	56.39	7.62
	6	LONG CURVED - FLAT	07150-05004	10.41	53.85	5.08	6	LONG CAM OPERATED - FLAT	07170-05000	10.41	55.37	5.08
5/32" CHOBERT & GROVIT	7	STANDARD - FLAT	07150-03005	12.19	33.02	6.10	7	# STANDARD - UNIVERSAL	07150-03205	12.19	34.29	10.41
	7	STANDARD - TAPERED	07150-03105	11.18	33.02	6.10	7	STD. CAM OPERATED - FLAT	07170-04700	12.19	33.02	6.10
	8	LONG - FLAT	07150-04005	12.19	58.42	6.10	8	# LONG - UNIVERSAL	07150-04205	12.19	59.69	10.67
	8	LONG CURVED - FLAT	07150-05005	12.19	56.64	6.10	8	LONG CAM OPERATED - FLAT	07170-05100	12.19	58.42	6.10
3/16" CHOBERT & GROVIT	9	STANDARD - FLAT	07150-03006	14.22	29.97	8.38	9	# STANDARD - UNIVERSAL	07150-03206	14.22	31.50	11.94
	9	STANDARD - TAPERED	07150-03106	14.22	29.97	8.38	9	STD. CAM OPERATED - FLAT	07170-04800	14.22	29.97	8.38
	10	LONG - FLAT	07150-04006	14.22	58.42	8.38	10	# LONG - UNIVERSAL	07150-04206	14.22	60.71	12.19
	10	LONG CURVED - FLAT	07150-05006	14.22	56.13	8.38	10	LONG CAM OPERATED - FLAT	07170-05200	14.22	58.42	8.38
1/4" CHOBERT	11	STANDARD - FLAT	07150-03008	16.26	29.97	9.91	11	STD. CAM OPERATED - FLAT	07170-04900	16.26	29.97	9.91
	12	LONG - FLAT	07150-04008	16.26	55.37	9.91	12	LONG CAM OPERATED - FLAT	07170-05300	16.26	55.37	9.91
3/32" BRIV Brass only	13	STANDARD - TAPERED	07170-03103	9.14	33.02	3.81	14	LTD. ACCESS CAM OPERATED	07177-03003	5.08	29.97	4.06
	14	LIMITED ACCESS	07274-01000	5.59	27.18	4.06	-	-	-	-	-	-
1/8" BRIV Al. Alloy, Brass, Steel	15	STANDARD - FLAT	07150-03004	10.41	29.97	5.08	15	STANDARD - RECESSED	07170-03004	10.41	30.48	7.62
	15	STANDARD - TAPERED	07170-03104	10.41	30.23	5.08	16	LONG - FLAT	07150-04004	10.41	55.37	5.08
	16	LONG - RECESSED	07170-03204	10.41	55.37	7.62	16	LONG CURVED - FLAT	07150-05004	10.41	53.85	5.08
	16	LONG CURVED - RECESSED	07170-03304	10.41	53.85	7.62	-	-	-	-	-	-
5/32" BRIV Al. Alloy, Brass, Steel	17	STANDARD - FLAT	07150-03005	12.19	33.02	6.10	17	STANDARD - RECESSED	07170-03005	12.19	33.53	10.41
	18	LONG - FLAT	07150-04005	12.19	58.42	6.10	18	LONG - RECESSED	07170-03205	12.19	58.42	10.41
	18	LONG CURVED - FLAT	07150-05005	12.19	56.64	6.10	18	LONG CURVED - RECESSED	07170-03305	12.19	56.64	10.41
5/32" BRIV St. Steel only	19	STANDARD - FLAT	07150-03005	12.19	33.02	6.10	19	STANDARD - RECESSED	07170-03005	12.19	33.53	10.41
	20	LONG - FLAT	07150-04005	12.19	58.42	6.10	20	LONG - RECESSED	07170-03205	12.19	58.42	10.41
	20	LONG CURVED - FLAT	07150-05005	12.19	56.64	6.10	20	LONG CURVED - RECESSED	07170-03305	12.19	56.64	10.41
3/16" BRIV Al. Alloy, Brass, Steel	21	STANDARD - FLAT	07150-03006	14.22	29.97	8.38	21	STANDARD - RECESSED	07170-03006	14.22	30.48	11.94
	22	LONG - FLAT	07150-04006	14.22	58.42	8.38	22	LONG - RECESSED	07170-03206	14.22	58.42	11.94
	22	LONG CURVED - FLAT	07150-05006	14.22	56.13	8.38	22	LONG CURVED - RECESSED	07170-03306	14.22	56.13	11.94
3/16" BRIV St. Steel only	23	STANDARD - FLAT	07150-03006	14.22	29.97	8.38	23	STANDARD - RECESSED	07170-03006	14.22	30.48	11.94
	24	LONG - FLAT	07150-04006	14.22	58.42	8.38	24	LONG - RECESSED	07170-03206	14.22	58.42	11.94
	24	LONG CURVED - FLAT	07150-05006	14.22	56.13	8.38	24	LONG CURVED - RECESSED	07170-03306	14.22	56.13	11.94
3/32" AVLUG	25	STANDARD - FLAT	07150-03003	9.14	33.02	4.06	25	STANDARD - TAPERED	07150-03103	9.14	33.02	4.06
	25	STD. CAM OPERATED - FLAT	07170-04500	9.14	33.02	4.06	26	LONG - FLAT	07150-04003	10.41	58.42	4.06
	26	LONG CURVED - FLAT	07150-05003	10.41	57.91	4.06	-	-	-	-	-	-
1/8" AVLUG	27	STANDARD - FLAT	07150-03004	10.41	29.97	5.08	27	STANDARD - TAPERED	07170-03104	10.41	30.23	5.08
	27	STD. CAM OPERATED - FLAT	07170-04600	10.41	29.97	5.08	28	LONG - FLAT	07150-04004	10.41	55.37	5.08
	28	LONG CURVED - FLAT	07150-05004	10.41	53.85	5.08	28	LONG CAM OPERATED - FLAT	07170-05000	10.41	55.37	5.08
2.5mm, 4-40 UNC AVSERT	29	STANDARD - FLAT	07150-03003	9.14	33.02	4.06	-	-	-	-	-	-
3.0mm, 6-32 UNC AVSERT	30	STANDARD - FLAT	07150-03004	10.41	29.97	5.08	30	STD. CAM OPERATED - FLAT	07170-04600	10.41	29.97	5.08
2.5mm AVTRONIC	31	STANDARD - FLAT	07150-03003	9.14	33.02	4.06	31	LTD. ACCESS CAM OPERATED	07271-08000	10.41	29.97	4.06
	32	LONG - FLAT	07150-04003	10.41	58.42	4.06	-	-	-	-	-	-
2.8mm AVTRONIC	33	STANDARD - FLAT	07271-05600	9.14	33.02	4.06	34	LTD. ACCESS CAM OPERATED	07271-08100	10.16	29.97	4.06
	35	LONG - FLAT	07271-05900	10.41	58.42	4.06	-	-	-	-	-	-
3.0mm RIVSCREW	36	STD. CAM OPERATED - HF	07271-03000	10.41	29.97	6.10	-	-	-	-	-	-
3.5mm RIVSCREW	37	STD. CAM OPERATED - HF	07271-03500	10.41	29.97	6.10	-	-	-	-	-	-
4.0mm RIVSCREW	38	STD. CAM OPERATED - HF	07271-04000	10.41	29.97	6.35	-	-	-	-	-	-

These nose jaws are suitable for placing Chobert rivets with a Universal Head Form. When used on the equivalent size of Briv, the highest possible clench is achieved. Note that when using Briv fasteners, the maximum grip is reduced by approximately 0.015" (0.4 mm).

MANDRELS & MANDREL FOLLOWER SPRINGS

Mandrels and mandrel follower springs, illustrated on page 9 need to be selected to suit the fastener type and size as well as the size of the hole in the application. Use of the wrong mandrel could increase the risk of breakage and the wear of the mandrel head. Feeding problems could occur if the wrong mandrel follower spring is used.

IMPORTANT

READ THE SAFETY INSTRUCTIONS on pages 2 and 3 carefully.

While a small amount of wear and marking will naturally occur through normal and correct use of mandrels, they must be regularly examined for excessive wear and marking, with particular attention to the head diameter, the tail jaw gripping area of the shank or heavy pitting of the shank and any mandrel distortion. Mandrels which fail during use could forcibly exit the tool. It is the customer's responsibility to ensure that mandrels are replaced before any excessive levels of wear and always before the maximum recommended number of placings. Contact your Avdel representative who will let you know what that figure is by measuring the broach load of your application with our calibrated measuring tool. These tools can also be purchased under part number 07900-09080, supplied with all necessary information for testing.

CHOBERT AND GROVIT

IMPERIAL

For mandrel or mandrel follower spring selection, follow instructions on page 20.

FASTENER	REF. N°	HOLE SIZE	STANDARD MANDREL - GREEN					HOLE SIZE	1ST OVERSIZE MANDREL - YELLOW					SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.	# S/R MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	# S/R MANDREL PART N°	P MAX.	
3/32" CHOBERT & GROVIT	1	AS REC.	.0725	07150-06003	.166	07150-08003	.071	+0.015	.074	07150-06303	.174	-	-	07150-06803
	1	-	-	-	-	-	-	+0.035	.076	-	-	07150-08103	.078	07150-06803
	2	AS REC.	.0725	07150-06003	.166	07150-08003	.071	+0.015	.074	07150-06303	.174	-	-	07170-06873
	2	-	-	-	-	-	-	+0.035	.076	-	-	07150-08103	.078	07170-06873
	3	AS REC.	.0725	07150-06003	.166	07150-08003	.071	+0.015	.074	07150-06303	.174	-	-	07170-06903
	3	-	-	-	-	-	-	+0.035	.076	-	-	07150-08103	.078	07170-06903
1/8" CHOBERT & GROVIT	5	AS REC.	.088	07150-06004	.216	07150-08004	.090	+0.004	.092	07150-06104	.237	07150-08104	.098	07150-06804
	6	AS REC.	.088	07150-07004	.216	07150-09004	.090	+0.004	.092	07150-07104	.237	07150-09104	.098	07150-07804
5/32" CHOBERT & GROVIT	7	AS REC.	.107	07150-06005	.244	07150-08005	.100	+0.008	.115	07150-06105	.284	07150-08105	.116	07170-06875
	7	-	-	-	-	-	-	-	-	-	-	-	-	-
	8	AS REC.	.107	07150-07005	.244	07150-09005	.100	+0.008	.115	07150-07105	.284	07150-09105	.116	07170-07875
3/16" CHOBERT & GROVIT	9	AS REC.	.132	07150-06006	.247	07150-08006	.102	+0.014	.146	07150-06106	.320	07150-08106	.130	07170-06876
	9	-	-	-	-	-	-	-	-	-	-	-	-	-
	10	AS REC.	.132	07150-07006	.247	07150-09006	.102	+0.014	.146	07150-07106	.320	07150-09106	.130	07170-07876
1/4" CHOBERT	11	AS REC.	.184	07150-06008	.268	07150-08008	.110	+0.012	.196	07150-06108	.330	07150-08108	.134	07150-06808
	12	AS REC.	.184	07150-07008	.268	07150-09008	.110	+0.012	.196	07150-07108	.330	07150-09108	.134	07150-07808

FASTENER	REF. N°	HOLE SIZE	2ND OVERSIZE MANDREL - BLUE					HOLE SIZE	3RD OVERSIZE MANDREL - RED					SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.	# S/R MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	# S/R MANDREL PART N°	P MAX.	
3/32" CHOBERT & GROVIT	1	+0.0035	.076	07150-06103	.185	-	-	-	-	-	-	-	-	07150-06803
	1	-	-	-	-	-	-	-	-	-	-	-	-	-
	2	+0.0035	.076	07150-06103	.185	-	-	-	-	-	-	-	-	07170-06873
	2	-	-	-	-	-	-	-	-	-	-	-	-	-
	3	+0.0035	.076	07150-06103	.185	-	-	-	-	-	-	-	-	07170-06903
	3	-	-	-	-	-	-	-	-	-	-	-	-	-
1/8" CHOBERT & GROVIT	5	+0.010	.098	07150-06204	.268	07150-08204	.110	+0.014	.102	07150-06304	.288	07150-08304	.118	07150-06804
	6	+0.010	.098	07150-07204	.268	07150-09204	.110	+0.014	.102	07150-07304	.288	07150-09304	.118	07150-07804
5/32" CHOBERT & GROVIT	7	+0.015	.122	07150-06205	.320	07150-08205	.130	-	-	-	-	-	-	07170-06875
	7	-	-	-	-	-	-	+0.025	.132	07150-06305	.372	07150-08305	.150	07150-06805
	8	+0.015	.122	07150-07205	.320	07150-09205	.130	-	-	-	-	-	-	07170-07875
	8	-	-	-	-	-	-	+0.025	.132	07150-07305	.372	07150-09305	.150	07150-07805
3/16" CHOBERT & GROVIT	9	-	-	-	-	-	-	-	-	-	-	-	-	-
	9	+0.024	.156	07150-06206	.372	07150-08206	.150	-	-	-	-	-	-	07150-06806
	10	-	-	-	-	-	-	-	-	-	-	-	-	-
1/4" CHOBERT	10	+0.024	.156	07150-07206	.372	07150-09206	.150	-	-	-	-	-	-	07150-07806
	11	-	-	-	-	-	-	-	-	-	-	-	-	-
1/4" CHOBERT	12	-	-	-	-	-	-	-	-	-	-	-	-	-

S/R: Short Reach Mandrel. See page 17 and 18 for explanation.

Tables below left and right and over the next 4 pages list part numbers of all mandrels and mandrel follower springs available per fastener or group of fasteners, i.e. for Chobert and Grovit on these pages.

While fastener sizes are always shown in their specified units, each table has been produced twice to offer dimensions in imperial units on the left-hand page then in metric units on the right-hand page. These 'Mandrel Selection' tables cross-reference with the 'Nose Jaw Selection' tables on pages 13 and 14 through the 'Ref. N°' column.

It is the diameter of the head at the end of a mandrel which when pulled through controls the expansion of the fastener body.

While there are different head shapes to suit different types of fasteners (see illustration on page 18), progressive head sizes are needed to reflect manufacturing tolerances on the diameter of the hole in your application so that the fastener always expands sufficiently to fill the hole.

Too large a mandrel head would overstress the mandrel and mandrels which fail during use could forcibly exit the tool. Selection tables are arranged into four 'mandrel size' sections, ranging from 'standard' to '3rd oversize', each being colour coded as per the end of the mandrel heads themselves.

CHOBERT AND GROVIT

METRIC

FASTENER	REF. N°	HOLE SIZE	STANDARD MANDREL - GREEN					HOLE SIZE	1ST OVERSIZE MANDREL - YELLOW					SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.	# S/R MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	# S/R MANDREL PART N°	P MAX.	
3/32" CHOBERT & GROVIT	1	AS REC.	1.84	07150-06003	4.22	07150-08003	1.80	+04	1.88	07150-06303	4.42	-	-	07150-06803
	1	-	-	-	-	-	-	+09	1.93	-	-	07150-08103	1.98	07150-06803
	2	AS REC.	1.84	07150-06003	4.22	07150-08003	1.80	+04	1.88	07150-06303	4.42	-	-	07170-06873
	2	-	-	-	-	-	-	+09	1.93	-	-	07150-08103	1.98	07170-06873
	3	AS REC.	1.84	07150-06003	4.22	07150-08003	1.80	+04	1.88	07150-06303	4.42	-	-	07170-06903
	3	-	-	-	-	-	-	+09	1.93	-	-	07150-08103	1.98	07170-06903
1/8" CHOBERT & GROVIT	4	AS REC.	1.84	07150-07003	4.22	07150-09003	1.80	+09	1.93	-	-	07150-09103	1.98	07150-07803
	5	AS REC.	2.24	07150-06004	5.49	07150-08004	2.29	+10	2.34	07150-06104	6.02	07150-08104	2.49	07150-06804
5/32" CHOBERT & GROVIT	6	AS REC.	2.24	07150-07004	5.49	07150-09004	2.29	+10	2.34	07150-07104	6.02	07150-09104	2.49	07150-07804
	7	AS REC.	2.72	07150-06005	6.20	07150-08005	2.54	+20	2.92	07150-06105	7.21	07150-08105	2.95	07170-06875
3/16" CHOBERT & GROVIT	7	-	-	-	-	-	-	-	-	-	-	-	-	-
	8	AS REC.	2.72	07150-07005	6.20	07150-09005	2.54	+20	2.92	07150-07105	7.21	07150-09105	2.95	07170-07875
1/4" CHOBERT	8	-	-	-	-	-	-	-	-	-	-	-	-	-
	9	AS REC.	3.35	07150-06006	6.27	07150-08006	2.59	+35	3.71	07150-06106	8.13	07150-08106	3.30	07170-06876
	9	-	-	-	-	-	-	-	-	-	-	-	-	-
3/16" CHOBERT & GROVIT	10	AS REC.	3.35	07150-07006	6.27	07150-09006	2.59	+35	3.71	07150-07106	8.13	07150-09106	3.30	07170-07876
	10	-	-	-	-	-	-	-	-	-	-	-	-	-
1/4" CHOBERT	11	AS REC.	4.67	07150-06008	6.81	07150-08008	2.79	+30	4.98	07150-06108	8.38	07150-08108	3.40	07150-06808
	12	AS REC.	4.67	07150-07008	6.81	07150-09008	2.79	+30	4.98	07150-07108	8.38	07150-09108	3.40	07150-07808

FASTENER	REF. N°	HOLE SIZE	2ND OVERSIZE MANDREL - BLUE					HOLE SIZE	3RD OVERSIZE MANDREL - RED					SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.	# S/R MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	# S/R MANDREL PART N°	P MAX.	
3/32" CHOBERT & GROVIT	1	+09	1.93	07150-06103	4.70	-	-	-	-	-	-	-	-	07150-06803
	1	-	-	-	-	-	-	-	-	-	-	-	-	-
	2	+09	1.93	07150-06103	4.70	-	-	-	-	-	-	-	-	07170-06873
	2	-	-	-	-	-	-	-	-	-	-	-	-	-
	3	+09	1.93	07150-06103	4.70	-	-	-	-	-	-	-	-	07170-06903
	3	-	-	-	-	-	-	-	-	-	-	-	-	-
1/8" CHOBERT & GROVIT	4	+09	1.93	07150-07103	4.70	-	-	-	-	-	-	-	-	07150-07803
	5	+25	2.49	07150-06204	6.81	07150-08204	2.79	+35	2.59	07150-06304	7.32	07150-08304	3.00	07150-06804
5/32" CHOBERT & GROVIT	6	+25	2.49	07150-07204	6.81	07150-09204	2.79	+35	2.59	07150-07304	7.32	07150-09304	3.00	07150-07804
	7	+38	3.10	07150-06205	8.13	07150-08205	3.30	-	-	-	-	-	-	07170-06875
	7	-	-	-	-	-	-	+63	3.35	07150-06305	9.45	07150-08305	3.81	07150-06805
	8	+38	3.10	07150-07205	8.13	07150-09205	3.30	-	-	-	-	-	-	07170-07875
3/16" CHOBERT & GROVIT	8	-	-	-	-	-	-	+63	3.35	07150-07305	9.45	07150-09305	3.81	07150-07805
	9	-	-	-	-	-	-	-	-	-	-	-	-	-
	9	+60	3.96	07150-06206	9.45	07150-08206	3.81	-	-	-	-	-	-	07150-06806
1/4" CHOBERT	10	-	-	-	-	-	-	-	-	-	-	-	-	-
	10	+60	3.96	07150-07206	9.45	07150-09206	3.81	-	-	-	-	-	-	07150-07806
1/4" CHOBERT	11	-	-	-	-	-	-	-	-	-	-	-	-	-
	12	-	-	-	-	-	-	-	-	-	-	-	-	-

S/R: Short Reach Mandrel. See page 17 and 18 for explanation.

To find the correct part number of a mandrel for a particular application, read the instructions below after you have gathered the following information as per example alongside. Answers for the example are shown in *grey italic*.

FASTENER NAME	<i>example</i>	<i>Chobert</i>
FASTENER SIZE		<i>1/8"</i>
DATASHEET		<i>Series 1125</i>
APPLICATION HOLE SIZE		<i>0.1335"</i>
CLEARANCE BEHIND APPLICATION		<i>Infinite</i>
'REF.Nº' FROM NOSE JAW SELECTION TABLE		<i>5 (standard flat)</i>

- Subtract the minimum hole size recommended (AS REC.) in the fastener datasheet from the actual application hole size. *-example: 0.005.*
- Turn to the page with the 'Mandrel Selection' table for your fastener, selecting either the imperial or the metric dimensions table (pages 15 to 20). *-example: page 15.*
- Starting in the 'Standard Mandrel - Green' section, find your fastener size in the left hand column. *-example: 1/8" Chobert & Grovit.*
- If you selected a nose jaw which can place your fastener, you should now be able to find a line within your fastener section with the same 'Ref. Nº' as that from the 'Nose Jaw Selection' table. *-example: 5.*
This is your line 'REF. Nº' in which you will find both your mandrel and mandrel follower spring part number. This line continues into the second half of the table for '2nd' and '3rd' oversize mandrels.
- Scan along that line to the 'hole size' columns and select whichever is nearest or equal to the figure calculated in step one. You may now read the mandrel part number next to the 'hole size'. *-example: 07150-06104.*
- For Chobert and Grovit only, most mandrels are also available in a 'short reach' version (see illustration on page 18). Short reach mandrels are used to minimise the possibility of the mandrel head contacting a rear obstruction. This would result in the underside of the fastener head not seating properly on the application surface, causing a lack of clench in the joint.
- Whichever size of mandrel you settle on, you will also need to check that the 'P' figure against that mandrel is adequate. 'P' is the clearance required for the mandrel head at the back of the application IN ADDITION to the length of the fastener protruding through the application, as shown in the drawing on page 18.
- You may now read the corresponding mandrel follower spring part number in the right-hand column of the table. *-example: 07150-06804.*

In all cases, satisfactory clenching of the joint should be assessed particularly if the size of the hole in your application is very close to the next oversize hole condition, when it will be safe to select the greater size of mandrel to obtain a higher clench. REMEMBER that this will increase the broach load and reduce the mandrel life.


BRIV

IMPERIAL

For mandrel or mandrel follower spring selection, follow instructions above.

FASTENER	REF. Nº	HOLE SIZE	STANDARD MANDREL - GREEN			HOLE SIZE	1ST OVERSIZE MANDREL - YELLOW			SPRING PART Nº
			HEAD Ø	MANDREL PART Nº	P MAX.		HEAD Ø	MANDREL PART Nº	P MAX.	
3/32" BRIV Brass only	13	AS REC.	.072	07150-06013	.119	+0.04	.076	07150-06113	.123	07170-06873
	14	AS REC.	.072	07150-06013	.119	+0.04	.076	07150-06113	.123	07170-06903
1/8" BRIV Al. Alloy, Brass, Steel	15	AS REC.	.092	07271-06414	.120	+0.05	.097	07271-06514	.126	07150-06814
	16	AS REC.	.092	07271-07414	.120	+0.05	.097	07271-07514	.126	07150-07814
5/32" BRIV Al. Alloy, Brass, Steel	17	AS REC.	.110	07150-06015	.136	+0.05	.115	07150-06115	.142	07170-06875
	18	AS REC.	.110	07150-07015	.136	+0.05	.115	07150-07115	.142	07170-07875
5/32" BRIV St.Steel only	19	AS REC.	.120	07170-06805	.126	+0.05	.125	07170-06825	.132	07170-06875
	20	AS REC.	.120	07170-07805	.126	+0.05	.125	07170-07825	.132	07170-07875
3/16" BRIV Al. Alloy, Brass, Steel	21	AS REC.	.141	07150-06016	.157	+0.05	.146	07150-06116	.164	07170-06876
	22	AS REC.	.141	07150-07016	.157	+0.05	.146	07150-07116	.164	07170-07876
3/16" BRIV St.Steel only	23	AS REC.	.153	07170-06806	.150	+0.05	.158	07170-06826	.156	07170-06876
	24	AS REC.	.153	07170-07806	.150	+0.05	.158	07170-07826	.156	07170-07876

FASTENER	REF. Nº	HOLE SIZE	2ND OVERSIZE MANDREL - BLUE			HOLE SIZE	3RD OVERSIZE MANDREL - RED			SPRING PART Nº
			HEAD Ø	MANDREL PART Nº	P MAX.		HEAD Ø	MANDREL PART Nº	P MAX.	
3/32" BRIV Brass only	13	+0.008	.079	07150-06213	.126	-	-	-	-	07170-06873
	14	+0.008	.079	07150-06213	.126	-	-	-	-	07170-06903
1/8" BRIV Al. Alloy, Brass, Steel	15	+0.010	.102	07271-06614	.133	-	-	-	-	07150-06814
	16	+0.010	.102	07271-07614	.133	-	-	-	-	07150-07814
5/32" BRIV Al. Alloy, Brass, Steel	17	+0.010	.120	07150-06215	.149	-	-	-	-	07170-06875
	18	+0.010	.120	07150-07215	.149	-	-	-	-	07170-07875
5/32" BRIV St.Steel only	19	-	-	-	-	-	-	-	-	-
	20	-	-	-	-	-	-	-	-	-
3/16" BRIV Al. Alloy, Brass, Steel	21	+0.010	.151	07150-06216	.170	+0.012	.153	07150-06316	.173	07170-06876
	22	+0.010	.151	07150-07216	.170	+0.012	.153	07150-07316	.173	07170-07876
3/16" BRIV St.Steel only	23	-	-	-	-	-	-	-	-	-
	24	-	-	-	-	-	-	-	-	-

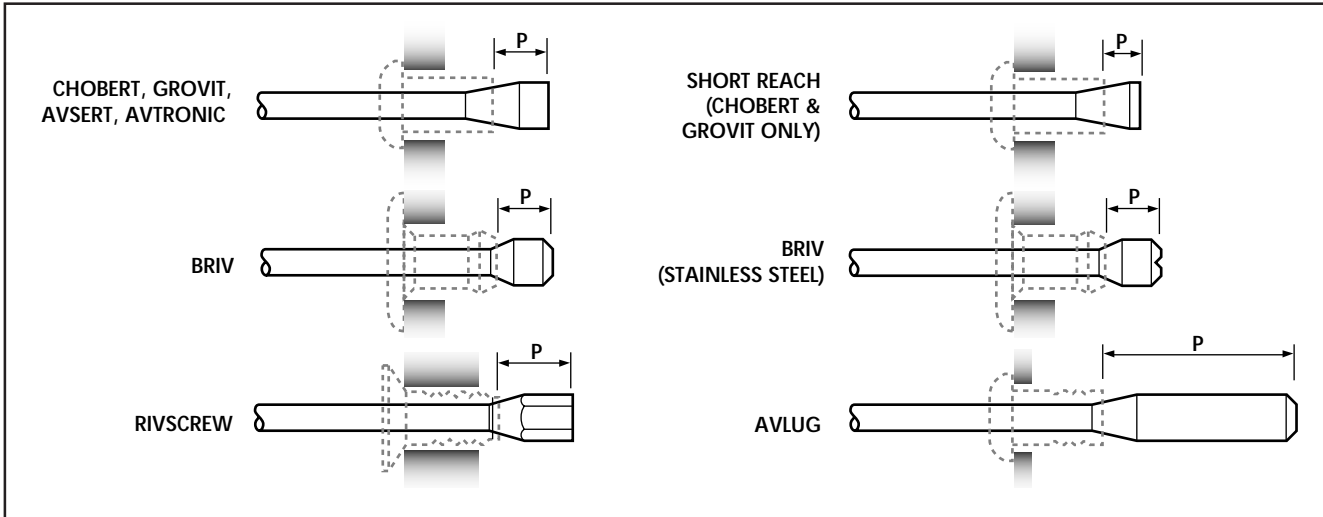

Mandrel head types and 'P' length.

Mandrels for stainless steel Briv are easily identifiable by a 'V' cut in the end of the mandrel heads.

When using curved nose jaws, mandrels have to be bent by hand to match the curvature of the nose jaw, thus ensuring good feed of fasteners.

BRIV **METRIC**

FASTENER	REF. N°	HOLE SIZE	STANDARD MANDREL - GREEN			HOLE SIZE	1ST OVERSIZE MANDREL - YELLOW			SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	
3/32" BRIV Brass only	13	AS REC.	1.83	07150-06013	3.02	+10	1.93	07150-06113	3.12	07170-06873
	14	AS REC.	1.83	07150-06013	3.02	+10	1.93	07150-06113	3.12	07170-06903
1/8" BRIV Al. Alloy, Brass, Steel	15	AS REC.	2.34	07271-06414	3.05	+13	2.46	07271-06514	3.20	07150-06814
	16	AS REC.	2.34	07271-07414	3.05	+13	2.46	07271-07514	3.20	07150-07814
5/32" BRIV Al. Alloy, Brass, Steel	17	AS REC.	2.79	07150-06015	3.45	+13	2.92	07150-06115	3.61	07170-06875
	18	AS REC.	2.79	07150-07015	3.45	+13	2.92	07150-07115	3.61	07170-07875
5/32" BRIV St. Steel only	19	AS REC.	3.05	07170-06805	3.20	+13	3.18	07170-06825	3.35	07170-06875
	20	AS REC.	3.05	07170-07805	3.20	+13	3.18	07170-07825	3.35	07170-07875
3/16" BRIV Al. Alloy, Brass, Steel	21	AS REC.	3.58	07150-06016	3.99	+13	3.71	07150-06116	4.17	07170-06876
	22	AS REC.	3.58	07150-07016	3.99	+13	3.71	07150-07116	4.17	07170-07876
3/16" BRIV St. Steel only	23	AS REC.	3.89	07170-06806	3.81	+13	4.01	07170-06826	3.96	07170-06876
	24	AS REC.	3.89	07170-07806	3.81	+13	4.01	07170-07826	3.96	07170-07876

FASTENER	REF. N°	HOLE SIZE	2ND OVERSIZE MANDREL - BLUE			HOLE SIZE	3RD OVERSIZE MANDREL - RED			SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	
3/32" BRIV Brass only	13	+20	2.01	07150-06213	3.20	-	-	-	-	07170-06873
	14	+20	2.01	07150-06213	3.20	-	-	-	-	07170-06903
1/8" BRIV Al. Alloy, Brass, Steel	15	+25	2.59	07271-06614	3.38	-	-	-	-	07150-06814
	16	+25	2.59	07271-07614	3.38	-	-	-	-	07150-07814
5/32" BRIV Al. Alloy, Brass, Steel	17	+25	3.05	07150-06215	3.78	-	-	-	-	07170-06875
	18	+25	3.05	07150-07215	3.78	-	-	-	-	07170-07875
5/32" BRIV St. Steel only	19	-	-	-	-	-	-	-	-	-
	20	-	-	-	-	-	-	-	-	-
3/16" BRIV Al. Alloy, Brass, Steel	21	+25	3.84	07150-06216	4.32	+30	3.85	07150-06316	4.39	07170-06876
	22	+25	3.84	07150-07216	4.32	+30	3.85	07150-07316	4.39	07170-07876
3/16" BRIV St. Steel only	23	-	-	-	-	-	-	-	-	-
	24	-	-	-	-	-	-	-	-	-

AVLUG, AVSERT, AVTRONIC & RIVSCREW

IMPERIAL

For mandrel or mandrel follower spring selection, follow instructions on page 20.

FASTENER	REF. N°	HOLE SIZE	STANDARD MANDREL - GREEN			HOLE SIZE	1ST OVERSIZE MANDREL - YELLOW			SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	
3/32" AVLUG	25	AS REC.	.076	07150-06603	.353	+005	.081	07150-06703	.478	07150-06803
	26	AS REC.	.076	07150-07603	.353	+003	.079	07150-07703	.368	07150-07803
1/8" AVLUG	27	AS REC.	.098	07150-06604	.593	-	-	-	-	07150-06804
	28	AS REC.	.098	07150-07604	.593	-	-	-	-	07150-07804
2.5mm, 4-40 UNC AVSERT	29	AS REC.	.0725	07150-06003	.145	-	-	-	-	07150-06803
3.0mm, 6-32 UNC AVSERT	30	AS REC.	.088	07150-06004	.185	-	-	-	-	07150-06804
2.5mm AVTRONIC	31	AS REC.	.070	07170-06025	.140	+003	.073	07170-06125	.140	07150-06803
	32	AS REC.	.070	07170-07025	.140	+003	.073	07170-07125	.140	07150-07803
2.8mm AVTRONIC	33	AS REC.	.079	07170-06028	.150	+003	.082	07170-06128	.150	07170-06528
	34	AS REC.	.079	07170-06028	.150	+003	.082	07170-06128	.150	07170-06873
	35	AS REC.	.079	07170-07028	.150	+003	.082	07170-07128	.150	07170-07528
3.0mm RIVSCREW	36	AS REC.	*.065	07271-06030	.127	-	-	-	-	07271-06630
3.5mm RIVSCREW	37	AS REC.	*.0825	07271-06035	.132	-	-	-	-	07271-06635
4.0mm RIVSCREW	38	AS REC.	*.103	07271-06140	.150	-	-	-	-	07271-06640

* These Dimensions are Across Flats

FASTENER	REF. N°	HOLE SIZE	2ND OVERSIZE MANDREL - BLUE			HOLE SIZE	3RD OVERSIZE MANDREL - RED			SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	
3/32" AVLUG	25	-	-	-	-	-	-	-	-	-
	26	-	-	-	-	-	-	-	-	-
1/8" AVLUG	27	-	-	-	-	-	-	-	-	-
	28	-	-	-	-	-	-	-	-	-
2.5mm, 4-40 UNC AVSERT	29	-	-	-	-	-	-	-	-	-
3.0mm, 6-32 UNC AVSERT	30	-	-	-	-	-	-	-	-	-
2.5mm AVTRONIC	31	+006	.076	07170-06225	.140	-	-	-	-	07150-06803
	32	+006	.076	07170-07225	.140	-	-	-	-	07150-07803
2.8mm AVTRONIC	33	+006	.085	07170-06228	.150	-	-	-	-	07170-06528
	34	+006	.085	07170-06228	.150	-	-	-	-	07170-06873
	35	+006	.085	07170-07228	.150	-	-	-	-	07170-07528
3.0mm RIVSCREW	36	-	-	-	-	-	-	-	-	-
3.5mm RIVSCREW	37	-	-	-	-	-	-	-	-	-
4.0mm RIVSCREW	38	-	-	-	-	-	-	-	-	-

AVLUG, AVSERT, AVTRONIC & RIVSCREW

METRIC

FASTENER	LINE N°	HOLE SIZE	STANDARD MANDREL - GREEN			HOLE SIZE	1ST OVERSIZE MANDREL - YELLOW			SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	
3/32" AVLUG	1	AS REC.	1.93	07150-06603	8.97	+10	2.06	07150-06703	12.14	07150-06803
	2	AS REC.	1.93	07150-07603	8.97	+10	2.01	07150-07703	9.35	07150-07803
1/8" AVLUG	3	AS REC.	2.49	07150-06604	15.06	-	-	-	-	07150-06804
	4	AS REC.	2.49	07150-07604	15.06	-	-	-	-	07150-07804
2.5mm, 4-40 UNC AVSERT	5	AS REC.	1.84	07150-06003	3.68	-	-	-	-	07150-06803
3.0mm, 6-32 UNC AVSERT	6	AS REC.	2.24	07150-06004	4.70	-	-	-	-	07150-06804
2.5mm AVTRONIC	7	AS REC.	1.78	07170-06025	3.56	+07	1.85	07170-06125	3.56	07150-06803
	8	AS REC.	1.78	07170-07025	3.56	+07	1.85	07170-07125	3.56	07150-07803
2.8mm AVTRONIC	9	AS REC.	2.01	07170-06028	3.81	+07	2.08	07170-06128	3.81	07170-06528
	10	AS REC.	2.01	07170-06028	3.81	+07	2.08	07170-06128	3.81	07170-06873
	11	AS REC.	2.01	07170-07028	3.81	+07	2.08	07170-07128	3.81	07170-07528
3.0mm RIVSCREW	12	AS REC.	* 1.65	07271-06030	3.23	-	-	-	-	07271-06630
3.5mm RIVSCREW	13	AS REC.	* 2.10	07271-06035	3.35	-	-	-	-	07271-06635
4.0mm RIVSCREW	14	AS REC.	* 2.62	07271-06140	3.81	-	-	-	-	07271-06640

* These Dimensions are Across Flats

FASTENER	LINE N°	HOLE SIZE	2ND OVERSIZE MANDREL - BLUE			HOLE SIZE	3RD OVERSIZE MANDREL - RED			SPRING PART N°
			HEAD Ø	MANDREL PART N°	P MAX.		HEAD Ø	MANDREL PART N°	P MAX.	
3/32" AVLUG	1	-	-	-	-	-	-	-	-	-
	2	-	-	-	-	-	-	-	-	-
1/8" AVLUG	3	-	-	-	-	-	-	-	-	-
	4	-	-	-	-	-	-	-	-	-
2.5mm, 4-40 UNC AVSERT	5	-	-	-	-	-	-	-	-	-
3.0mm, 6-32 UNC AVSERT	6	-	-	-	-	-	-	-	-	-
2.5mm AVTRONIC	7	+1.5	1.93	07170-06225	3.56	-	-	-	-	07150-06803
	8	+1.5	1.93	07170-07225	3.56	-	-	-	-	07150-07803
2.8mm AVTRONIC	9	+1.5	2.16	07170-06228	3.81	-	-	-	-	07170-06528
	10	+1.5	2.16	07170-06228	3.81	-	-	-	-	07170-06873
	11	+1.5	2.16	07170-07228	3.81	-	-	-	-	07170-07528
3.0mm RIVSCREW	12	-	-	-	-	-	-	-	-	-
3.5mm RIVSCREW	13	-	-	-	-	-	-	-	-	-
4.0mm RIVSCREW	14	-	-	-	-	-	-	-	-	-

SERVICING THE TOOL

Regular servicing should be carried out and a comprehensive inspection performed annually or every 500,000 cycles, whichever is sooner.

IMPORTANT

The employer is responsible for ensuring that tool maintenance instructions are given to the appropriate personnel. The operator should not be involved in maintenance or repair unless properly trained.

DAILY

- Daily, before use or when first putting the tool into service, pour a few drops of clean, light lubricating oil into the air inlet of the tool if no lubricator is fitted on air supply. If the tool is in continuous use, the air hose should be disconnected from the main air supply and the tool lubricated every two to three hours.
- Check for air leaks. If damaged, hoses and couplings should be replaced.
- If there is no filter on the pressure regulator, bleed the air line to clear it of accumulated dirt or water before connecting the air hose to the tool. If there is a filter, drain it.
- Check that the nose equipment is correct.
- Check mandrels regularly for signs of wear or damage monitoring the number of placings (read the SAFETY INSTRUCTIONS page 2 and 3).

WEEKLY

- Remove, inspect, clean and grease the tail jaws (refer to 'Tail Jaw Assembly' in the 'Maintenance' section, page 23).

Grease can be ordered as a single item, the part number is shown in the service kit opposite.

M O L Y L I T H I U M G R E A S E E P 3 7 5 3 S A F E T Y D A T A	
<p>FIRST AID SKIN: As the grease is completely water resistant it is best removed with an approved emulsifying skin cleaner.</p> <p>INGESTION: Make the individual drink 30ml Milk of Magnesia, preferably in a cup of milk.</p> <p>EYES: Irritant but not harmful. Irrigate with water and seek medical attention.</p> <p>ENVIRONMENT Scrape up for burning or disposal on approved site.</p>	<p>FIRE FLASH POINT: Above 220°C. Not classified as flammable. Suitable extinguishing media: CO₂, Halon or water spray if applied by an experienced operator.</p> <p>HANDLING Use barrier cream or oil resistant gloves</p> <p>STORAGE Away from heat and oxidising agent.</p>

For all servicing we recommend the use of the service kit below (part number 07900-02700).

SERVICE KIT					
ITEM PART N°	DESCRIPTION	N° OFF	ITEM PART N°	DESCRIPTION	N° OFF
07900-00009	3/32" ALLEN KEY	1	07900-00203	TORQUE WRENCH	1
07900-00013	1/8" ALLEN KEY	1	07900-00204	BARREL NUT ADAPTOR ASSEMBLY	1
07900-00157	CIRCLIP PLIERS	1	07900-00206	CYLINDER ASSEMBLY TOOL	1
07900-00092	7/8" x 3/4" SPANNER	2	07900-00238	7/16" x 3/8" SPANNER	1
07900-00158	PIN PUNCH	1	07900-00181	LOCK RING KEY	1
07900-00201	0.05" ALLEN KEY	1	07992-00020	80gm MOLYLITHIUM GREASE E.P.3753	1 TIN

NOTE: Spanner sizes are measured 'across flats' unless otherwise specified.

MAINTENANCE

Every 500000 cycles the tool should be completely dismantled and components replaced where worn, damaged or when recommended. All 'O' rings and seals should be renewed and lubricated with Moly Lithium grease EP 3753 before assembling.

IMPORTANT

Safety Instructions appear on page 2 & 3.
The employer is responsible for ensuring that tool maintenance instructions are given to the appropriate personnel.
The operator should not be involved in maintenance or repair of the tool unless properly trained.

The airline must be disconnected before any servicing or dismantling is attempted, unless specifically instructed otherwise.

It is recommended that any dismantling operation be carried out in clean conditions.

Item numbers in bold refer to the general assembly and parts list on page 25 and 26.

Prior to dismantling the tool, you will need to remove the nose equipment.

For total servicing of the tool itself, we advise you proceed with dismantling of sub-assemblies in the order shown below, starting with either the handle assembly or the manifold assembly, depending on your model.

HANDLE ASSEMBLY (07271 & 07274 Models)

- To remove handle assembly 56, remove cushion 57 to gain access to screws 36.
- Remove six (07271 Model), or four (07274 Model) screws 36.
- Remove handle assembly 56.
- Remove the trigger valve by unscrewing adjuster 50 and lifting out button 49.
- Withdraw valve plunger 43, spring 46, valve plunger washer 51 and plunger seal 47.
- The design of the valve is such that a minimum of service is required during the tool life. Servicing should only be carried out if absolutely necessary.
- If so, unscrew retaining screw 44, withdraw spring 45, 'O' ring 48 and ball 42.
- When assembling lubricate bores with Moly Lithium grease EP 3753.
- When assembling replace retaining screw 44 using a low strength anaerobic adhesive (e.g. Permabond A121 or A137). The adhesive should be spread under the head of retaining screw 44 for an approximate length of 3.2 mm (1/8") along the screw thread.
- Always fit a new self adhesive cushion 57.
- Complete assembly in reverse order of dismantling.

* refers to items included in the Avdel service kit. For complete list see above.

TAIL JAW ASSEMBLY

- Unscrew locking ring 20 with special lock ring key* provided with the tool and withdraw the tail jaw cylinder assembly.
 - Noting the orientation of each part, remove seal 19, jaw housing spacer 2, tail jaw housing 10, spring 8 and rubber spring sleeve 4.
 - Using the circlip pliers* remove internal circlip 3.
 - Invert tail jaw cylinder and shake out tail jaws 9.
 - Place the hook on the lock ring key into the jaw slot of the jaw turret and piston assembly 6 and pull out the jaw turret and piston assembly 6 forward.
 - Remove screw 18 in the back of the jaw turret and piston assembly 6 with an Allen key* while holding the turret with a bar inserted into the jaw slot of the turret.
 - Clean out the hole in the turret using a 4.7 mm (³/₁₆") diameter drill.
 - Replace screw 18 using a suitable non-hardening sealing compound (e.g. Red Hermatite).
 - Clean and inspect tail jaws 9, replacing if worn or damaged.
 - Clean and inspect tail jaw cylinder assembly 7 for scoring of bore, for wear in the circlip groove or clogging of the airways.
 - Clean jaw housing 10, inspect the internal taper for wear and check the vent hole is clear.
 - Check that the free length of the spring 8 is 38.1mm (1.5").
 - Replace rubber spring sleeve 4 if damaged.
 - Grease tail jaws 9, turret and piston assembly 6 and the tail jaw cylinder assembly 7 with Moly Lithium EP3753 grease.
- Complete assembly in reverse order of dismantling.

BACK-UP RINGS

- To inspect condition of back-up rings 24, remove the tail jaw cylinder assembly 7 as described above.
 - Slacken socket grub screw 25 in barrel nut 23.
 - Undo the barrel nut 23 using two spanners*.
 - Remove spacer 13 and spacing collar 39 and push barrel 59 forward.
 - Withdraw bush stops 12, back-up ring 24 and buffer 15.
- When assembling, insert buffer 15, back-up ring 24 and bush stops 12. (It is essential that these parts are assembled in the correct sequence). On replacement the barrel nut MUST be set with a torque wrench to 15 lbf/ft using the adaptor provided in tool service kit.
- Complete assembly in reverse order of dismantling.

TAIL JAW VALVE (SIDE VALVE) - (07271 & 07274 Models)

- Remove by carefully prising off button 54 and withdrawing spindle 52.
 - Clean and inspect 'O' rings for signs of wear or damage.
 - Lubricate bore of valve with Moly Lithium EP3753 grease.
- Assemble in reverse order of dismantling.

* refers to items included in the Avdel service kit. For complete list see page 22.

AIR CYLINDER ASSEMBLY

- The air cylinder assembly is normally trouble free and will not require any attention for long periods.
- If the air cylinder assembly requires dismantling, service tool part number 07900-00206 will be required.
- There are three pistons on the 07271 model, and only two pistons on the 07274 model.
- To dismantle the air cylinder assembly, remove handle assembly 56 or manifold 69, as applicable.
- Remove cursor assembly 21, by inserting a mandrel through the front of the barrel 59 until it engages in the cursor. Pull out the mandrel and cursor together.
- Remove tail jaw assembly 7 as previously described.
- Pull out mandrel guide 17.
- Slide off plastic sleeve 60 or 65, easing it over drilled screw 41.
- Remove screw 25 and remove barrel nut 23.
- Slide out barrel 59, spacing collar 39, spacer 13, buffer 15, back-up ring 24 and bush stops 12.
- Undo rear end cap screws 36, 29, 14, noting their positions.
- On the 07271 model, remove drilled screw 41, then remove end cap 40.
- Remove gland cup 30, piston seal diaphragm 31, piston diaphragm 32 and second spacing collar 39, noting position of each part.
- On the 07271 model undo cylinder diaphragm seal 32, two screws 29 and pull out the remaining two pistons and the third spacing collar.
- Insert the cylinder assembly tool* to engage in the front diaphragm with the stem passing through the front of the tool, and tighten lightly with a washer and a nut to hold the diaphragm against the spring pressure, whilst final screws 29 are removed.

- Measure free length of the spring is 139.5 mm (5.5"), replacing if damaged.


- Reassemble using the procedure described below:
 - Assemble diaphragm seal assembly 33, piston spacer 16, piston diaphragm 32, gland cup 30 and piston seal diaphragm 31 onto the assembly tool with the spring 22 and insert into the cylinder.
 - Draw diaphragm seal assembly 33 into position with the nut and rotate using a tommy bar to align the screw holes.
 - Position four screws 29 into diaphragm and fully tighten top two screws 29.
 - Remove assembly tool, then tighten bottom two screws 36.
 - Grease and replace spacing collar 39 and barrel 59.
 - Grease and fit next piston assembly onto barrel 59 and carefully push in the second cylinder diaphragm, rotating it into position with the assembly tool.
 - Insert top two screws 29 and replace second spacing collar 39.
 - On the 07274 model replace end cap 40.
 - On the 07271 & 07273 models replace the final piston and end cap 40.
 - Assemble back-up rings 24, buffer 15, spacing collar 39, spacer 13 and barrel nut 23, which **MUST** be set with a torque wrench to 20 Nm (15 lb/ft), using the adaptor and the wrench.
 - Lock barrel nut 23 with screw 25.
 - Replace sleeve 60 or 65, tail jaw cylinder assembly 7, handle assembly 56 or manifold 69, as applicable.
 - Clean and oil cursor 21 ensuring correct orientation when refitting into the front of barrel 59. If incorrectly fitted follow the procedure on page 11.

IMPORTANT





Check the tool against daily and weekly servicing.

* refers to items included in the Avdel service kit. For complete list see page 22.

GENERAL ASSEMBLY OF BASE TOOLS 07271-00200/07274-00200

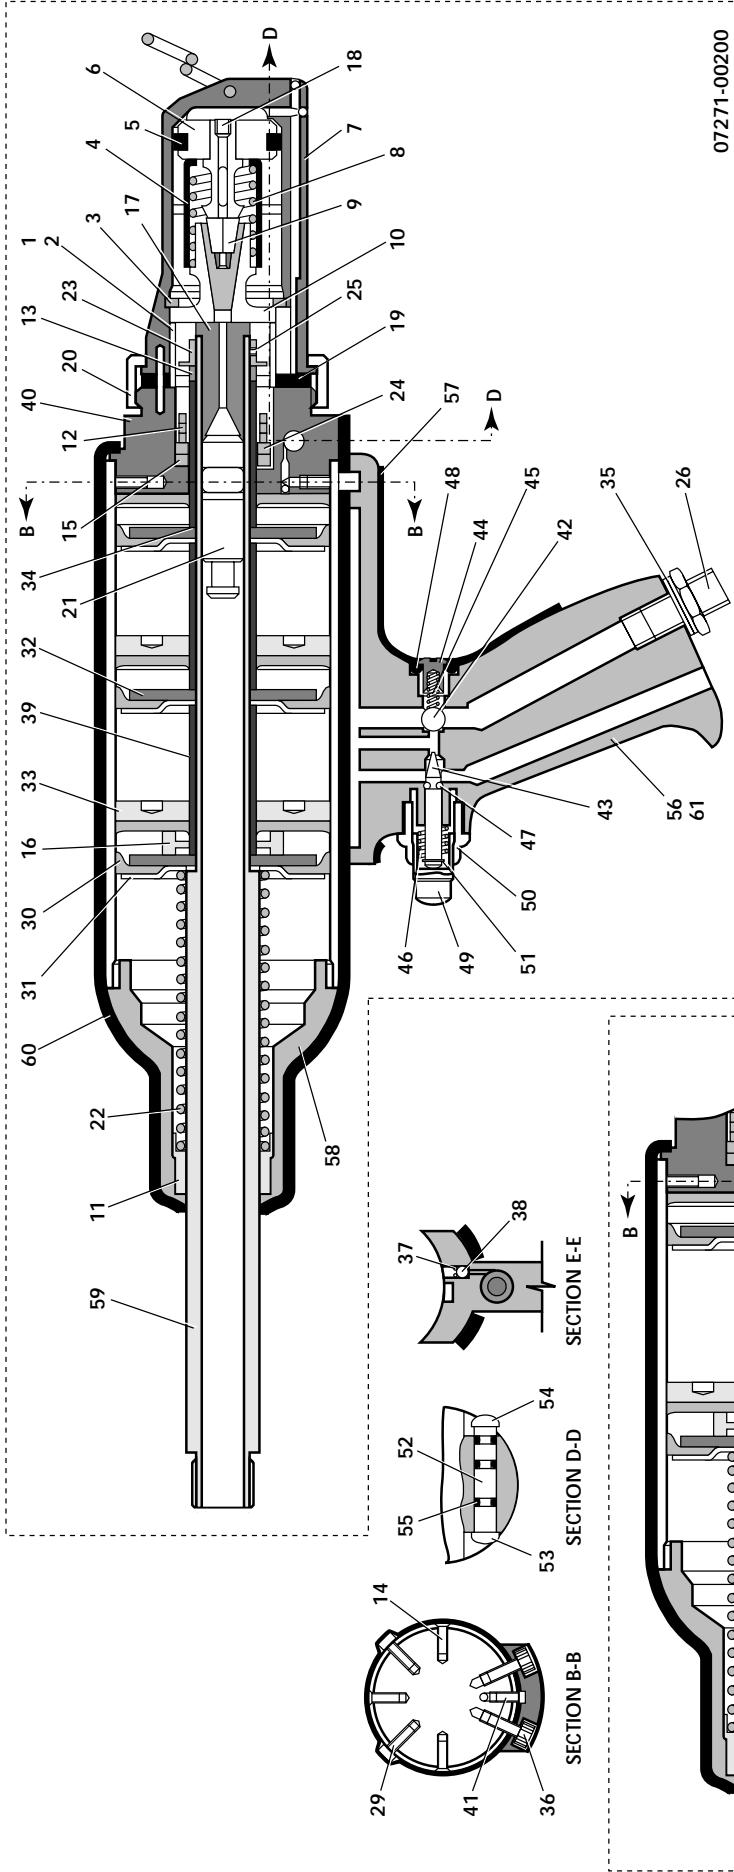

07271-00200

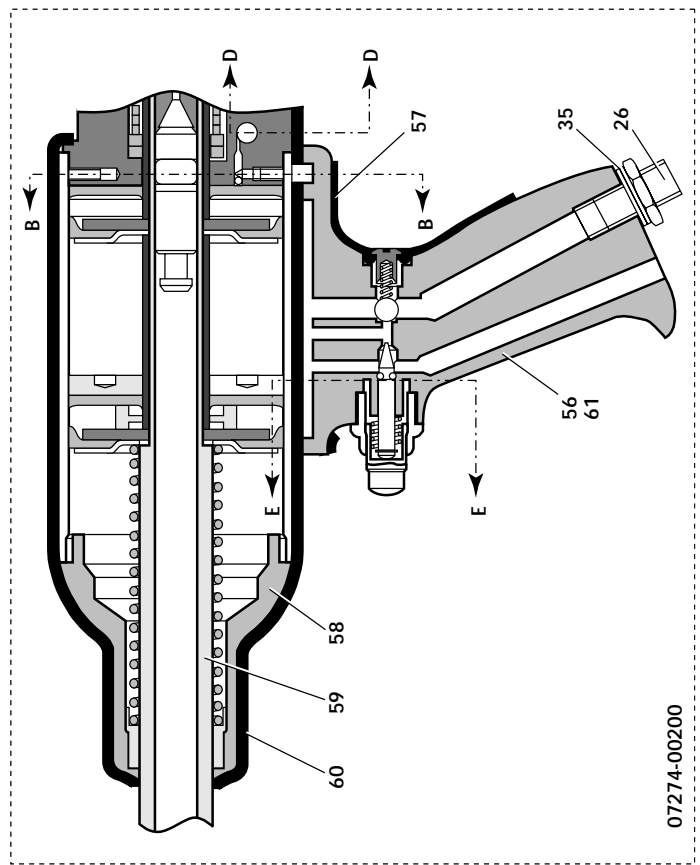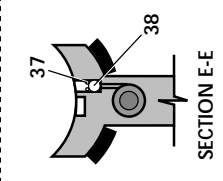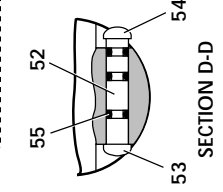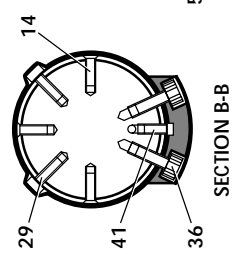

07274-00200

PARTS LIST OF ITEMS COMMON TO 07271-00200/07274-00200 BASE TOOLS

ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
1	07271-00900	TAIL JAW ASSEMBLY	1	-	11	07271-00313	BUSH	1	-	21	07271-01100	CURSOR	1	-
2	07271-00905	JAW HOUSING SPACER	1	-	12	07170-00201	BUSH STOP	3	-	22	07150-00303	SPRING	1	-
3	07004-00051	CIRCLIP	1	-	13	07271-00309	SPACER	1	-	23	07271-00317	BARREL NUT	1	-
4	07271-00906	SPRING SLEEVE	1	-	14	07001-00257	SCREW	3	-	24	07271-00314	BACK UP RING	1	-
5	07003-00132	'O' RING	1	-	15	07271-00324	BUFFER	1	-	25	07001-00243	SCREW	1	-
6	07271-01000	TURRET AND PISTON ASSEMBLY	1	-	16	07273-00302	PISTON SPACER	1	-	26	07005-00041	CONNECTOR	1	-
7	07271-00800	TAIL JAW CYLINDER ASSEMBLY	1	-	17	07271-00323	MANDREL GUIDE	1	-	27	07900-00354	SAFETY LABEL	1	NOT SHOWN
8	07154-00404	SPRING	1	-	18	07001-00267	SCREW	1	-	28	07900-00361	TOOL INSTRUCTION MANUAL	1	NOT SHOWN
9	07151-00403	TAIL JAWS	1 pair	-	19	07271-00201	SEAL	1	-					
10	07271-00903	TAIL JAW HOUSING	1	-	20	07271-00203	LOCK RING	1	-					

07271-00200 PARTS LIST (cont)

ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
29	07001-00145	SCREW	6	-	29	07001-00145	SCREW	4	-
30	07150-00315	GLAND CUP	3	-	30	07150-00315	GLAND CUP	2	-
31	07271-00304	PISTON SEAL DIAPHRAGM	3	-	31	07271-00304	PISTON SEAL DIAPHRAGM	2	-
32	07271-00306	PISTON DIAPHRAGM	3	-	32	07271-00306	PISTON DIAPHRAGM	2	-
33	07271-00400	DIAPHRAGM SEAL	2	-	33	07271-00400	DIAPHRAGM SEAL	1	-
34	07271-00322	GASKET	4	-	34	07271-00322	GASKET	3	-
35	07005-00015	SEALING WASHER	1	-	35	07005-00015	SEALING WASHER	1	-
36	07001-00264	SCREW	6	-	36	07001-00264	SCREW	4	-
37	07271-00604	SPRING	1	-	37	07271-00604	SPRING	1	-
38	03219-00700	BALL	1	-	38	03219-00700	BALL	1	-
39	07271-00307	SPACING COLLAR	3	-	39	07271-00307	SPACING COLLAR	2	-
40	07271-00500	END CAP	1	-	40	07271-00500	END CAP	1	-
41	07271-00321	DRILLED SCREW	1	-	41	07271-00321	DRILLED SCREW	1	-
42	07007-00457	BALL	1	-	42	07007-00457	BALL	1	-
43	07150-00703	VALVE PLUNGER	1	-	43	07150-00703	VALVE PLUNGER	1	-
44	07150-00704	SCREW	1	-	44	07150-00704	SCREW	1	-
45	07150-00706	SPRING	1	-	45	07150-00706	SPRING	1	-
46	07150-00707	SPRING	1	-	46	07150-00707	SPRING	1	-
47	07150-00708	PLUNGER SEAL	1	-	47	07150-00708	PLUNGER SEAL	1	-
48	07003-00042	'O' RING	1	-	48	07003-00042	'O' RING	1	-
49	07150-00710	BUTTON	1	-	49	07150-00710	BUTTON	1	-
50	07150-00711	ADJUSTER	1	-	50	07150-00711	ADJUSTER	1	-
51	07150-00712	WASHER	1	-	51	07150-00712	WASHER	1	-
52	07271-00506	SPINDLE	1	-	52	07271-00506	SPINDLE	1	-
53	07004-00058	CHROME WASHER	1	-	53	07004-00058	CHROME WASHER	1	-
54	07004-00059	BLACK WASHER	1	-	54	07004-00059	BLACK WASHER	1	-
55	07003-00046	'O' RING	3	-	55	07003-00046	'O' RING	3	-
56	07271-03600	HANDLE ASSEMBLY	1	-	56	07274-00800	HANDLE ASSEMBLY	1	-
57	07271-00204	CUSHION	1	-	57	07274-00204	CUSHION	1	-
58	07271-00316	CYLINDER	1	-	58	07274-01100	CYLINDER	1	-
59	07271-01301	BARREL	1	-	59	07274-00401	BARREL	1	-
60	07271-00320	SLEEVE	1	-	60	07274-00304	SLEEVE	1	-
61	07271-01700	HANDLE	1	-	61	07274-00900	HANDLE	1	-

07274-00200 PARTS LIST (cont)

ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
29	07001-00145	SCREW	6	-	29	07001-00145	SCREW	4	-
30	07150-00315	GLAND CUP	3	-	30	07150-00315	GLAND CUP	2	-
31	07271-00304	PISTON SEAL DIAPHRAGM	3	-	31	07271-00304	PISTON SEAL DIAPHRAGM	2	-
32	07271-00306	PISTON DIAPHRAGM	3	-	32	07271-00306	PISTON DIAPHRAGM	2	-
33	07271-00400	DIAPHRAGM SEAL	2	-	33	07271-00400	DIAPHRAGM SEAL	1	-
34	07271-00322	GASKET	4	-	34	07271-00322	GASKET	3	-
35	07005-00015	SEALING WASHER	1	-	35	07005-00015	SEALING WASHER	1	-
36	07001-00264	SCREW	6	-	36	07001-00264	SCREW	4	-
37	07271-00604	SPRING	1	-	37	07271-00604	SPRING	1	-
38	03219-00700	BALL	1	-	38	03219-00700	BALL	1	-
39	07271-00307	SPACING COLLAR	3	-	39	07271-00307	SPACING COLLAR	2	-
40	07271-00500	END CAP	1	-	40	07271-00500	END CAP	1	-
41	07271-00321	DRILLED SCREW	1	-	41	07271-00321	DRILLED SCREW	1	-
42	07007-00457	BALL	1	-	42	07007-00457	BALL	1	-
43	07150-00703	VALVE PLUNGER	1	-	43	07150-00703	VALVE PLUNGER	1	-
44	07150-00704	SCREW	1	-	44	07150-00704	SCREW	1	-
45	07150-00706	SPRING	1	-	45	07150-00706	SPRING	1	-
46	07150-00707	SPRING	1	-	46	07150-00707	SPRING	1	-
47	07150-00708	PLUNGER SEAL	1	-	47	07150-00708	PLUNGER SEAL	1	-
48	07003-00042	'O' RING	1	-	48	07003-00042	'O' RING	1	-
49	07150-00710	BUTTON	1	-	49	07150-00710	BUTTON	1	-
50	07150-00711	ADJUSTER	1	-	50	07150-00711	ADJUSTER	1	-
51	07150-00712	WASHER	1	-	51	07150-00712	WASHER	1	-
52	07271-00506	SPINDLE	1	-	52	07271-00506	SPINDLE	1	-
53	07004-00058	CHROME WASHER	1	-	53	07004-00058	CHROME WASHER	1	-
54	07004-00059	BLACK WASHER	1	-	54	07004-00059	BLACK WASHER	1	-
55	07003-00046	'O' RING	3	-	55	07003-00046	'O' RING	3	-
56	07271-03600	HANDLE ASSEMBLY	1	-	56	07274-00800	HANDLE ASSEMBLY	1	-
57	07271-00204	CUSHION	1	-	57	07274-00204	CUSHION	1	-
58	07271-00316	CYLINDER	1	-	58	07274-01100	CYLINDER	1	-
59	07271-01301	BARREL	1	-	59	07274-00401	BARREL	1	-
60	07271-00320	SLEEVE	1	-	60	07274-00304	SLEEVE	1	-
61	07271-01700	HANDLE	1	-	61	07274-00900	HANDLE	1	-

FAULT DIAGNOSIS

SYMPTOM	POSSIBLE CAUSE	REMEDY
Tool will not place fastener.	<ul style="list-style-type: none"> → Low air pressure. → Lack of lubrication. → High broach load. → Worn or broken tail jaws. → Tail jaws switched off. 	<ul style="list-style-type: none"> → Increase air pressure. → Lubricate tool at air inlet point. → Check fastener grip and application hole size. → Check for correct size mandrel. → New tail jaws. → Switch on tail jaws.
'Mandrel Slip' - jaws will not grip mandrel .	<ul style="list-style-type: none"> → Worn or dirty jaws. → Insufficient air pressure/volume. → Tail jaw switch inoperable. → Faulty valve on guard. → Air leaks to tail jaws. → Mandrel broken and not reaching tail jaws. 	<ul style="list-style-type: none"> → Clean or renew as necessary. → Increase air pressure/volume. → Replace switch. → Return guard for service. → Renew 'O' rings on piston 6. → Replace mandrel.
Jaws will not release mandrel.	<ul style="list-style-type: none"> → Dirty tail jaws or tail jaw housing. → Faulty valve/guard or tail jaw switch. 	<ul style="list-style-type: none"> → Clean and lubricate. → Service or replace as necessary.
Fasteners will not feed through nose jaws.	<ul style="list-style-type: none"> → Tail jaws not switched on. → Worn tail jaws. → Cursor orientation incorrect. → Unsuitable nose jaws. → Mandrel follower spring not fitted. → Incorrect gap between fastener head and nose jaws when loaded. → Cursor sticking. → Weak outer spring around cursor. → Incorrect mandrel follower spring fitted. 	<ul style="list-style-type: none"> → Switch on tail jaws. → Renew tail jaws. → Refit, ensuring correct orientation. → Fit correct nose jaws. → Fit mandrel follower spring. → Set gap to 1.5mm - 3mm ($1/16'' - 1/8''$). See 'Loading the Tool', on page 8. → Clean and oil cursor. → Renew cursor. → Fit correct mandrel follower spring.
Excessive tail jaw wear	<ul style="list-style-type: none"> → High broach load. → High shock loads through mandrel. 	<ul style="list-style-type: none"> → Check application hole size and thickness and fastener grip capability. → Ensure correct number of bush stops.
Feeding more than 1 fastener	<ul style="list-style-type: none"> → Mandrel slip. → Incorrect gap between fastener head and nose jaws when loaded. 	<ul style="list-style-type: none"> → Check as for 'Mandrel Slip', stage 2. → Set gap to 1.5mm - 3mm ($1/16'' - 1/8''$). See 'Loading the Tool', on page 8.

Declaration of Conformity

We, *Avdel UK Limited, Mundells, Welwyn Garden City, Herts, AL7 1QB*

declare under our sole responsibility that the product

type 0727

Serial N°

to which this declaration relates is in conformity with the following standards or other formative documents

EN292 part 1 and part 2

ISO 8662 part 1

ISO 3744

ISO PREN792 part 14

following the provisions of the *Machine Directive 98/37/EC*

Welwyn Garden City - date of issue

A. Seewraj
Product Engineering Manager - Automation Tools



BS EN ISO 9001&2: 1994
FM317 FM317/1 FM317/2
FM09651/1 FM09651/2







An Acument™ Global Technologies Company

AUSTRALIA

Acument Australia Pty Ltd.
891 Wellington Road
Rowville, Victoria 3178
Tel: +61 3 9765 6400
Fax: +61 3 9765 6445
Email: info@acument.com.au

CANADA

Avdel Canada, a Division of Acument
Canada Limited
87 Disco Road
Rexdale
Ontario M9W 1M3
Tel: +1 416 679 0622
Fax: +1 416 679 0678
Email: infoAvdel-Canada@acument.com

CHINA

Acument China Ltd.
RM 1708, 17/F., Nanyang Plaza,
57 Hung To Rd., Kwun Tong
Hong Kong
Tel: +852 2950 0631
Fax: +852 2950 0022
Email: infochina@acument.com

FRANCE

Avdel France S.A.S.
33 bis, rue des Ardennes
BP4
75921 Paris Cedex 19
Tel: +33 (0) 1 4040 8000
Fax: +33 (0) 1 4208 2450
Email: AvdelFrance@acument.com

GERMANY

Avdel Deutschland GmbH
Klusriede 24
30851 Langenhagen
Tel: +49 (0) 511 7288 0
Fax: +49 (0) 511 7288 133
Email: AvdelDeutschland@acument.com

ITALY

Avdel Italia S.r.l.
Viale Lombardia 51/53
20047 Brugherio (MI)
Tel: +39 039 289911
Fax: +39 039 2873079
Email: vendite@acument.com

JAPAN

Acument Japan Kabushiki Kaisha
Center Minami SKY,
3-1 Chigasaki-Chuo, Tsuzuki-ku,
Yokohama-city, Kanagawa Prefecture
Japan 224-0032
Tel: +81 45 947 1200
Fax: +81 45 947 1205
Email: info@acument.co.jp

SINGAPORE

Acument Asia Pacific (Pte) Ltd.
#05-03/06 Techlink
31 Kaki Bukit Road 3
Singapore, 417818
Tel: +65 6840 7431
Fax: +65 6840 7409
Email: Tlim@acument.com

SOUTH KOREA

Acument Korea Ltd.
212-4, Suyang-Ri,
Silchon-Eup, Kwangju-City,
Kyunggi-Do, Korea, 464-874
Tel: +82 31 798 6340
Fax: +82 31 798 6342
Email: info@acumentkorea.com

SPAIN

Avdel Spain S.A.
C/ Puerto de la Morcuera, 14
Poligono Industrial Prado Overa
Ctra. de Toledo, km 7,8
28919 Leganés (Madrid)
Tel: +34 (0) 91 3416767
Fax: +34 (0) 91 3416740
Email: ventas@acument.com

UNITED KINGDOM

Avdel UK Limited
Pacific House
2 Swiftfields
Watchmead Industrial Estate
Welwyn Garden City
Hertfordshire
AL7 1LY
Tel: +44 (0) 1707 292000
Fax: +44 (0) 1707 292199
Email: enquiries@acument.com

USA

Avdel USA LLC
614 NC Highway 200 South
Stanfield,
North Carolina 28163
Tel: +1 704 888-7100
Fax: +1 704 888-0258
Email: infoAvdel-USA@acument.com

© Avdel UK Limited 2007

Manual No.	Issue	Change Note No.
07900-00361	A	07/44
	A2	07/103
	B3	07/359